



PART NUMBER: C1573T , C1583S

PRODUCT: NERF STEPS



APPLICATION: 2015-C TAHOE /
SURBURBAN

PARTS INCLUDED:	QTY
Driver side step	1
Passenger side step	1
HARDWARE PACK:	1
M8 X 1.25 Hex Bolt	12
M10 x 30 Fender Washer	6
5/16 Flat washer	6
5/16 lock washer	6




INSTALLATION:


Step 1: Starting with the driver side, remove the nine OE ½" bolts from the factory running boards. Carefully remove and set aside. **Fig. A**

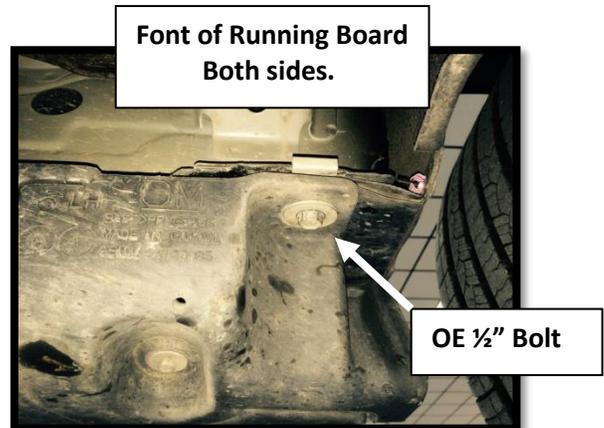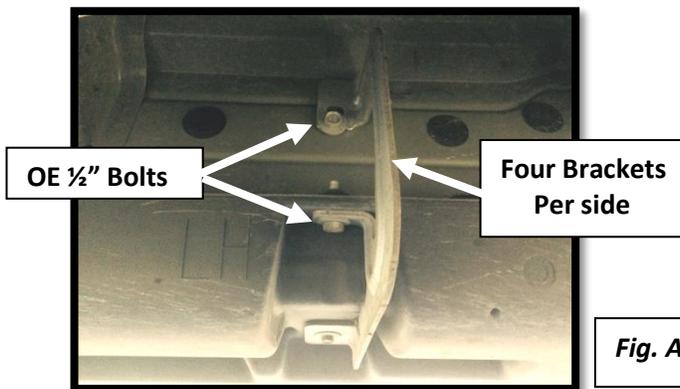

Step 2: Repeat step one with passenger side. **NOTE** . Be careful not to damage AC lines when removing factory running board. **Fig. B**

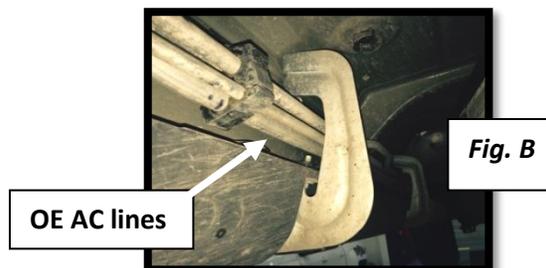

Step 3: Carefully lift up N-Fab Nerf-step into position, lining up the brackets with the OE mounts in the pinch weld and upper threaded holes in the inner body. Starting with the bottom mount in the bracket, insert the supplied M8 x 1.25 Hex head bolts with the 5/16" lock washer and 5/16" flat washer (small) and thread in. Leave loose at this time. **Fig. C**

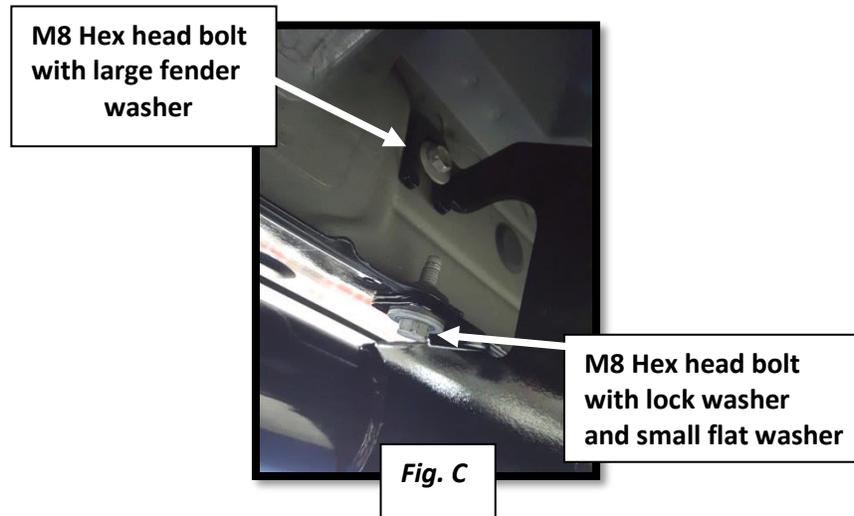

Step 4: Insert the supplied M8 x 1.25 Hex head bolt and M10 x 30 Fender washer into the bracket and upper threaded hole. Leave loose at this time. **Fig. C**

Step 5: Once the step is in proper alignment, tighten all lower bolts then all upper bolts.

Step 6: Repeat steps 3-5 with passenger side. **Note: Be careful not to damage factory AC lines when navigating brackets into position. Do not use any factory hardware when installing Nfab nerf steps. This will cause damage to lines.** (Fig. D)

