

# RUGGED COVER

## Dodge Ram Box Premium Vinyl Tri-Fold Cover Installation Instructions

200 Universal Dr. • Owosso, MI 48867 • 989-725-8354 • Fax: 989-725-8409 • 1-800-433-3604



**1**

- 1.** Place the cover on front of truck bed.  
**Note:** Look at step 10.




Place dust seal between cab and truck bed.




**7**

- 7.** Cover is laying down flat.

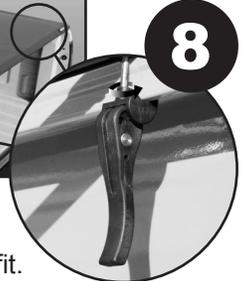



**8**

- 8.** Secure rear clamps for a tight fit.

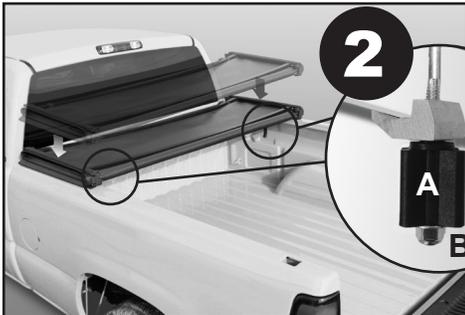

**2**

- 2.** **A.** Tighten the plastic knob so that the hook is securely fastened to the metal bed rail.  
**B.** Tighten the nylox nut so that it is snug against the bottom of the plastic knob.

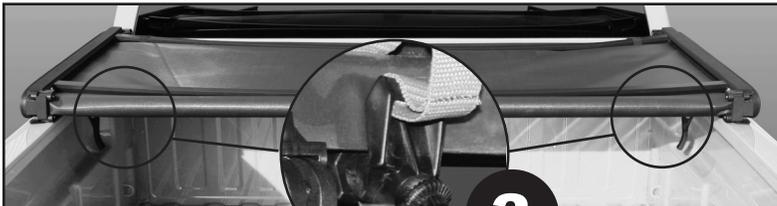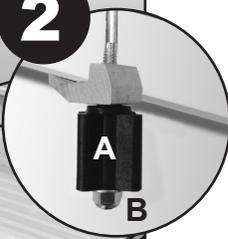

**3**

- 3.** Attach safety tether strap on both sides.



**5**

- 5.** Unfold first section.




**4**

- 4.** Undo both clips so cover can be unfolded.



**6**

- 6.** Unfold second section.

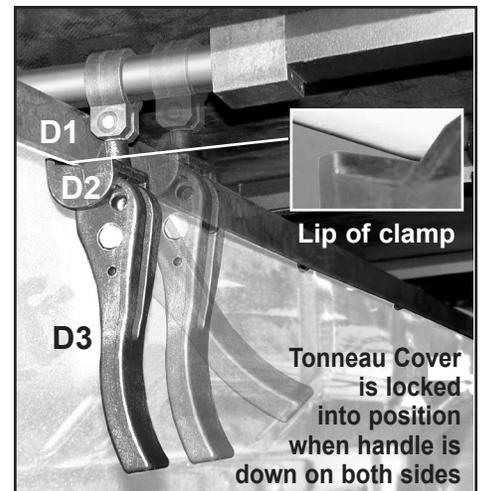

- 2&7.** To clamp cover down, put lip of clamp under aluminum block and push handle down.  
**(See D1, D2, D3)**



Use orange clip to store clamp when cover is folded.



### How To Adjust Clamps

- The clamps might need adjusted.
- To adjust, turn handle on clamp clockwise to tighten or counter clockwise to loosen.



www.ruggedliner.com

Patent No's.  
7,823,957/8,146,982/8,256,824

**TRUCK HERO** company

# RUGGED COVER


## Dodge Ram Box Premium Vinyl Tri-Fold Cover Installation Instructions

200 Universal Dr. • Owosso, MI 48867 • 989-725-8354 • Fax: 989-725-8409 • 1-800-433-3604


### 1 Dodge Ram Box Rail Installation Instructions





**1.** Remove the end caps from utility track.

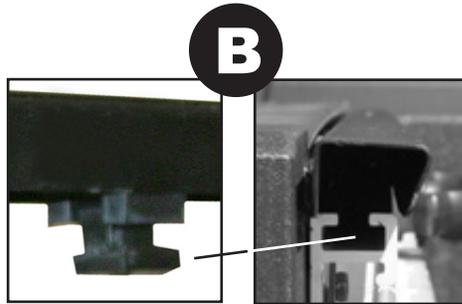

**2.** Slide rails above the utility track while inserting the plastic rail connector into utility track slot.


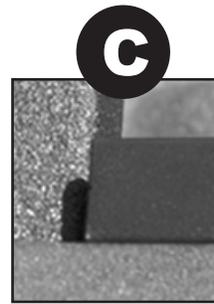


**3.** Slide the rails all the way back until the end touches the back bulkhead.

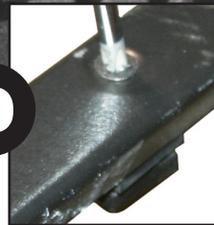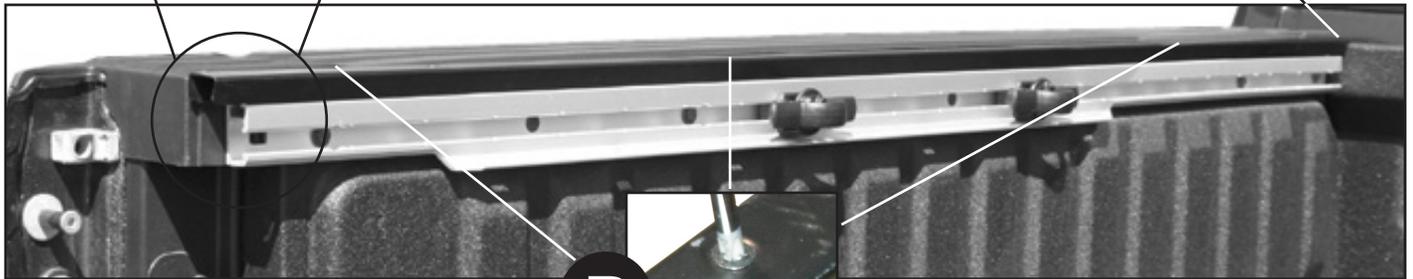

**4.** With the rails in place. Tighten down the screws in three locations on the rail with phillips screwdriver.

### 9 Utility Track System Blocks

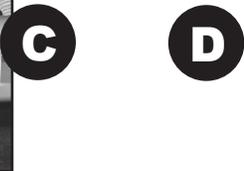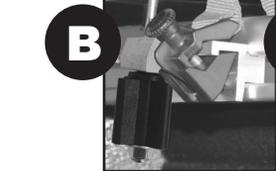

- A.** Slide aluminum blocks into utility track, position and tighten set-screw.
- B.** Secure front clamps on to aluminum blocks.
- C.** Attach safety straps to aluminum blocks.
- D.** Attach rear clamps to aluminum blocks.
- E.** Replace end caps, see 1A above.

### 10 ONLY ON 2019+ RAM MODELS Add Extra Cab Corner Foam Pc.

- A.** If you don't have a drop-in bedliner add extra cab corner foam piece to existing corner piece on both corners by taking the backing off the side with the two sided tape.
- B.** Stick directly on the corner piece already there.

