
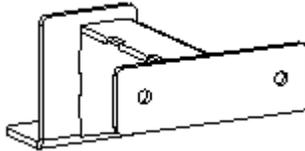
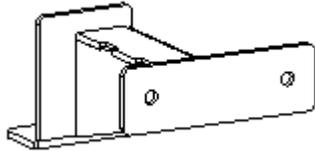


# GO RHINO®

## INSTALLATION INSTRUCTIONS

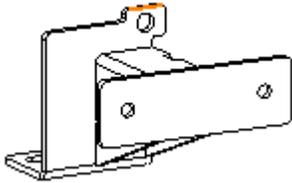

### PART NO.

- FSD4505TK

### PRODUCT DESCRIPTION:


- DOMINATOR FRAME SLIDER BRACKET

### APPLICATION:

- JEEP WRANGLER JKU

### PRODUCT SAFETY & LEGAL DISCLAIMER

- **IMPORTANT READ ALL INSTRUCTIONS CAREFULLY BEFORE INSTALLING, FAILURE TO DO SO MAY CAUSE PERSONAL INJURY OR DAMAGE TO PRODUCT AND/OR PROPERTY.**
- **Review the product package and contents prior to beginning the installation.** Take care when opening the packaging and removing items. If a return is needed you will want to return the product in its original packaging if possible.
- This instruction guide is provided as a GENERAL installation guide, some vehicles vary dimensionally and may require additional steps.
- Test fit the product on the vehicle prior to any third party modifications and or finishing. The manufacturer and/or distributors do not accept responsibility for third party charges, labor and or third part replacement modifications. Some modifications may void the factory warranty.
- Exercise due-diligence when installing this product. The manufacturer and distributors of this product do not accept any responsibility for vehicle damage or personal injury resulting from the installation of this product. Careless installation and operation can result in serious injury or equipment damage.
- This product is for general off-road use. All liability for installation and use rests with the owner/operator.
- **INSTALLER:** Once installation is complete, please return this guide along with other documentation included in this product back to the consumer for future reference. The manufacturer/distributors of this product do not guarantee this particular version will be available at a later date.

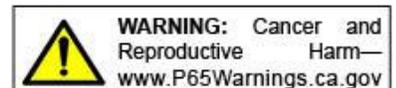

© 2016 Go Rhino Products. All rights reserved

[www.gorhino.com](http://www.gorhino.com)

589 W. Apollo St., Brea, CA 92821

P: 888 427 4466



## INSTALLATION INSTRUCTIONS

### INJURY HAZARD

Please complete a shop and tool inspection prior to beginning the installation.

- Always make sure you have a clean, dry and well lit work area.
- Always remove jewelry, loose fitting clothing and wear protective gloves and eye protection.
- Always use extreme caution when jacking or raising a vehicle for work. Set the emergency brake and use tire/wheel blocks and jack stands. Refer to the vehicle manufacturer hand book. Utilize the vehicle manufacturers designated lifting points.
- Always use appropriate and adequate care in lifting parts during disassembly and installation. Seek help in lifting heavy or large items into place. Utilize jacks and or lifting devices when available.
- Always insure products are secure during disassembly and installation.
- Always wear eye protection and take steps to protect any exposed skin during the installations. Drilling, cutting and grinding plastic and metal may create flying particles that can cause injury.
- Always use extreme caution when drilling, cutting and or grinding on a vehicle. Thoroughly inspect the area to be drilled, on both sides of material, prior to modification and relocate any objects that may become damaged.
- Always assemble and tighten all fasteners per the installation instructions.
- Always route electrical cables carefully. Avoid moving parts, parts that may become hot and rough or sharp edges.
- Always insulate and protect all exposed wiring and electrical connections.

### MAINTENANCE AND CARE

- Always perform regular inspections and maintenance on mounts and related fasteners.
- Periodically check and tighten all fasteners.
- Stripped, fractured, or bent fasteners must be replaced.
- After washing the vehicle make sure to fully dry all surfaces.
- In areas with cold temperatures make sure to wash the product often to remove harmful materials used on road ways.
- Never use abrasive cleaners or polish compounds. Clean with a gentle soap and water. If you use wax use a non-abrasive automotive wax such as pure carnauba wax.

### WARNING

Some products have been designed to work together with factory rear sensor systems, factory forward facing sensor systems and factory air bags.


- Installation of some of these products may alter the factory sensor system performance.
- Factory sensors may read shackles or hooks protruding from the fairlead and or tow hooks.
- All sensor testing is completed by Go Rhino Products and or third party testing labs on modified vehicles.
- Sensor sensitivity, factory sensor housing, orientation, and operating conditions are all variables that will influence functionality of the sensors.
- Installation of some product may effect the factory air bag systems.
- Some products allow the use of third party products such as winches, shackles, hooks, etc. Follow the respective manufacturers operating instructions for use with our products.
- Make sure to fully understand the product, it's intended use and operation prior to use.
- Above all... be safe!

# GO RHINO®

## INSTALLATION INSTRUCTIONS

### PARTS INCLUDED IN THIS LIST:

ITEM	QTY.	DESCRIPTION	ITEM	QTY.	DESCRIPTION	ITEM	QTY.	DESCRIPTION
A	4	1/2" Flat Washer	F	20	3/8" Flat Washer	K	1 Pr.	Front Bracket (Driver side shown)
B	4	1/2" Lock Washer	G	12	3/8" Lock washer	L	1 Pr.	Center Bracket (Driver side shown)
C	4	1/2" Hex Nut	H	4	3/8" Lock nut	M	1 Pr.	Rear Bracket (Driver side shown)
D	2	Vinyl gasket	I	4	3/8 x 2" Hex Bolt	N	6	3/8" Nut-Plate
E	12	3/8"-16 x 1 1/4" Hex Bolt	J	4	1/2" Tab bolt	O	1 Pr.	Dominator Running Board Set (Not shown)

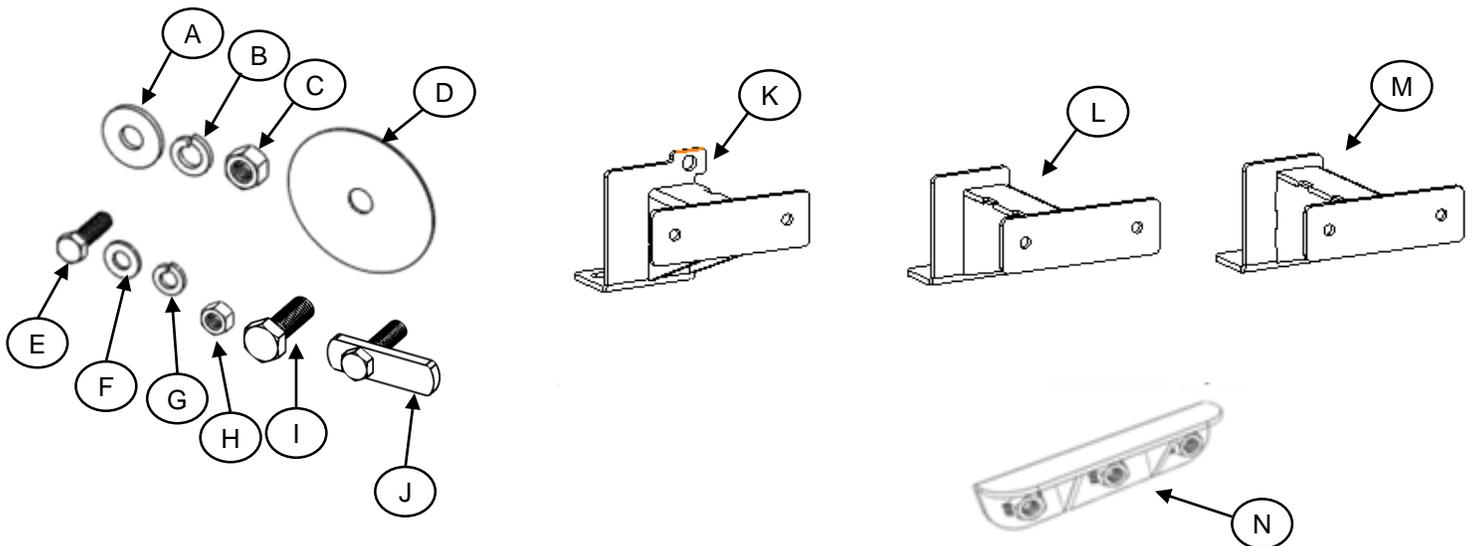

Go Rhino recommends you, the installer, read this installation instruction manual from front to back before installing the product. You may also [click here](#) to view an installation video or visit <http://www.gorhino.com/Installation-Videos>.

### TOOLS NEEDED FOR INSTALLATION:

- 3/4" Socket & Wrench
- 9/16" Socket & Wrench
- 18mm Socket
- Ratchet & Extension
- Flat screwdriver
- Drill
- 1/8" & 7/16" Drill Bit
- Measure Tape
- Marker
- Security Glasses

**ESTIMATED TIME FOR INSTALLATION:**




**1.5 Hour**

If you need installation service for your new product, call the authorized distributor from whom you purchased the product or an authorized installation service company which can be found by calling toll free 1-888-427-4466


# GO RHINO®

## INSTALLATION INSTRUCTIONS


**Step-1** Begin the installation on the passenger side. Locate the existing bolts at the front, center & rear of the frame rail and remove them, (FIGURE 1, 2 & 3).

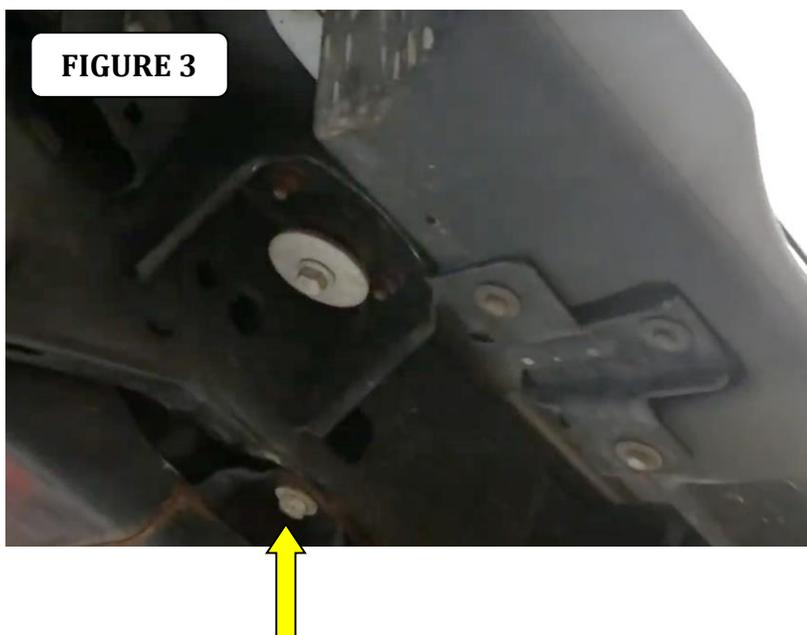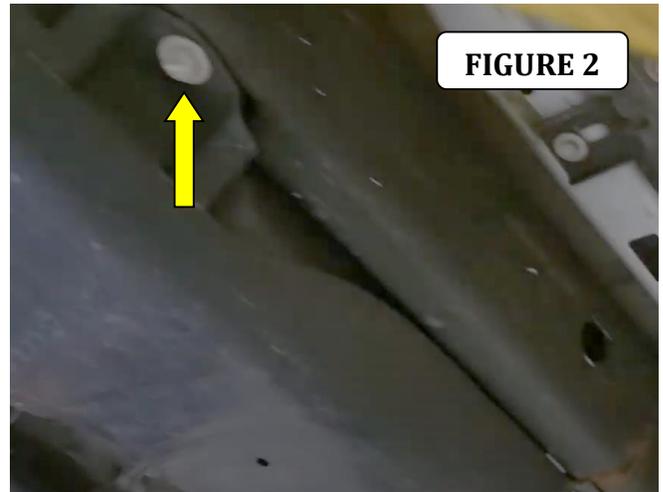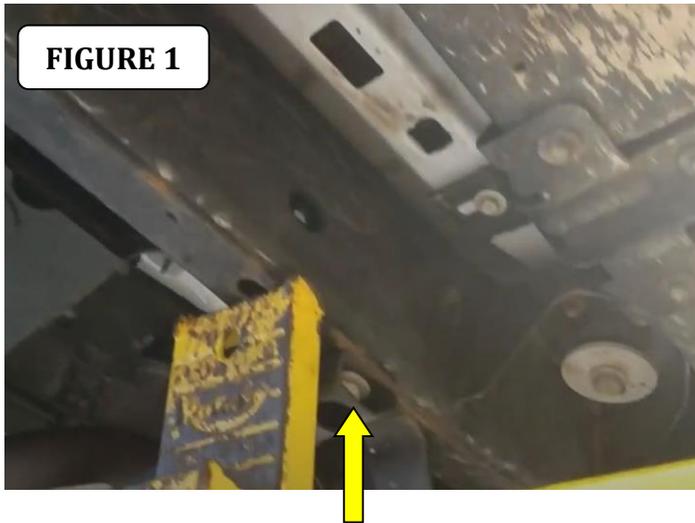

**Step-2** At the front location, you will need to drill the top hole. Continue threading a bolt plate in the guide bolt then introduce it through the obround hole, the tip of the bolt guide must come out through the top hole of the frame rail. Do not pull out the bolt plate attached to the bolt guide. (FIGURE 4).

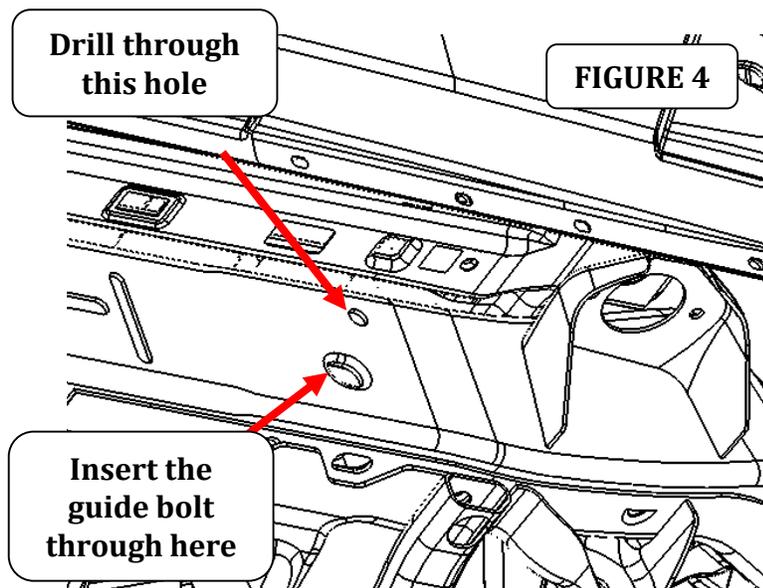



**Step-3** Position the frame mount slider brackets up to the frame rail. Be careful to insert the bolt guide tip through the top hole in the front bracket. Position the bottom of the front bracket between the frame rail and the cross member. Once the bracket is in position pull out the bolt plate inside the frame rail; use a vinyl gasket to prevent the bolt plate from falling into the frame rail. Secure it using (1) 1/2" flat washer, (1) 1/2" lock washer and (1) 1/2" hex nut. Use the factory bolt removed to secure to the bottom of the bracket, Figure 5. Leave the nut and bolt loose for final adjustment.

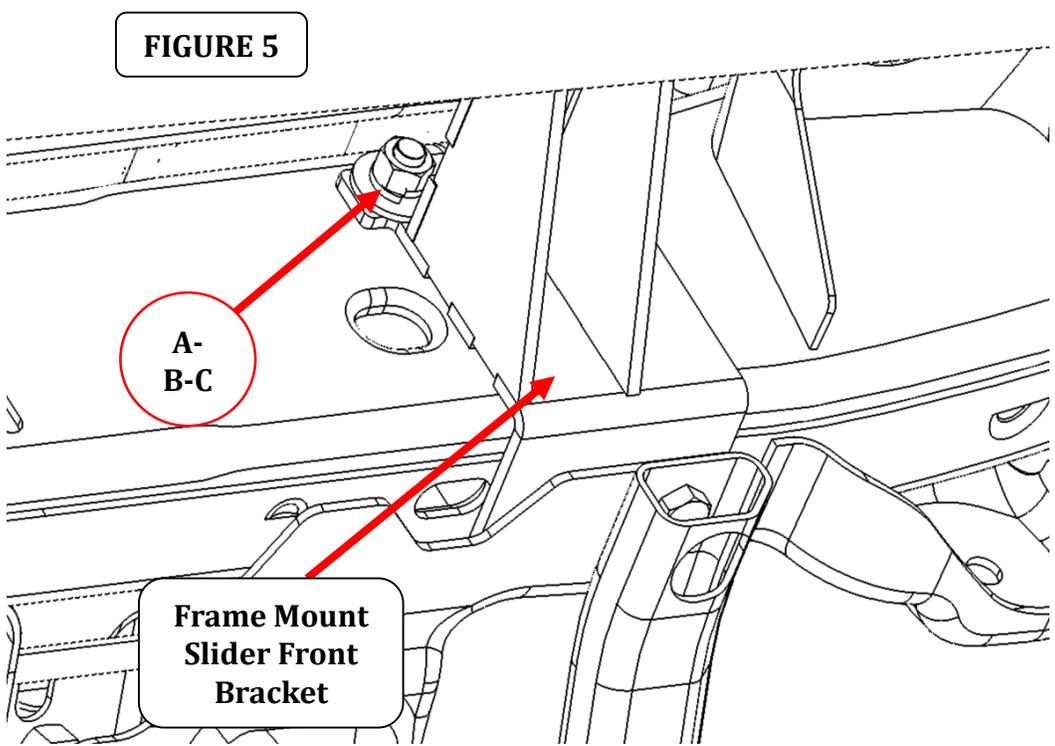

# GO RHINO®

## INSTALLATION INSTRUCTIONS


**Step-4** Mark on the external face of the body mount wall a center point as shown and drill a  $\varnothing 7/16''$  hole, Figure 6.

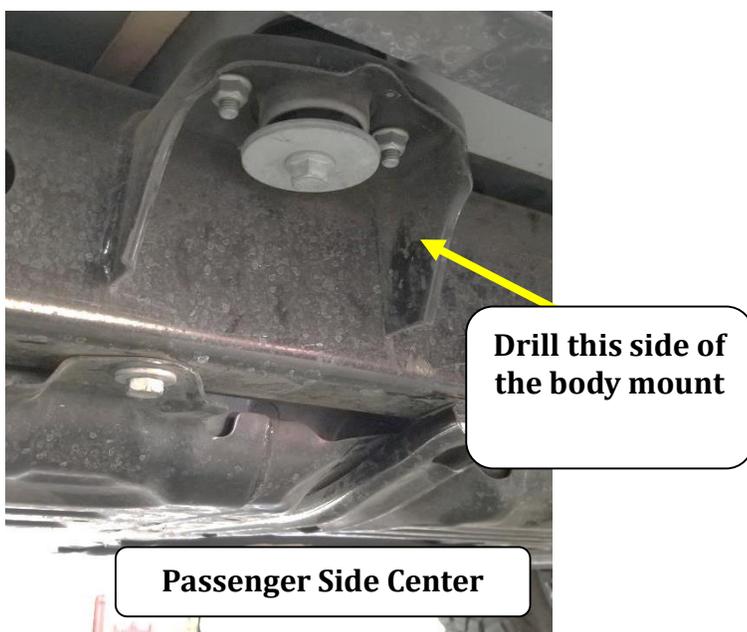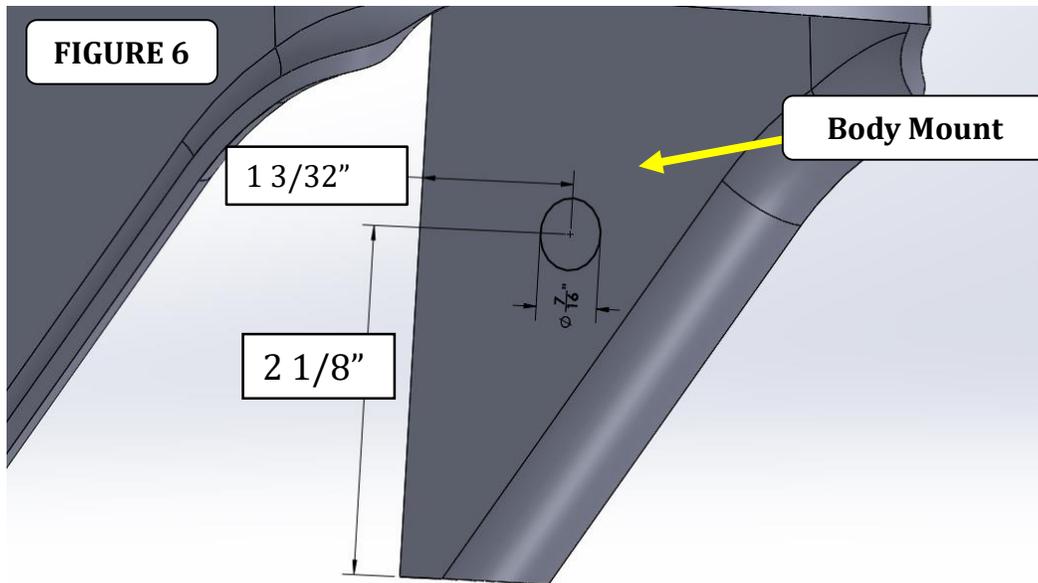


# GO RHINO®

## INSTALLATION INSTRUCTIONS

**Step-5** Position the center bracket between the frame rail and the skid plate by pulling down gently the skid plate using a flat screwdriver. Secure using the bolt removed. Figure 7. Leave the bolt loose for final adjustment.

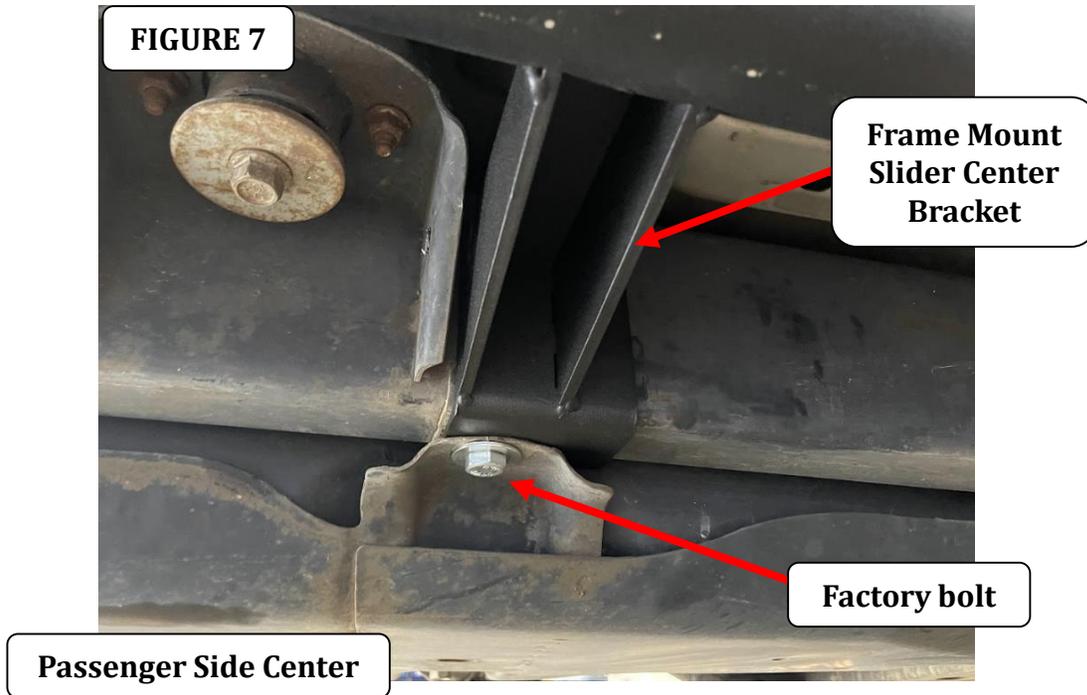


**Step-6** Position the rear bracket between the frame rail and the skid plate by pulling down gently the skid plate using a flat screwdriver. Secure using the bolt removed. Figure 8. Leave the bolt loose for final adjustment.

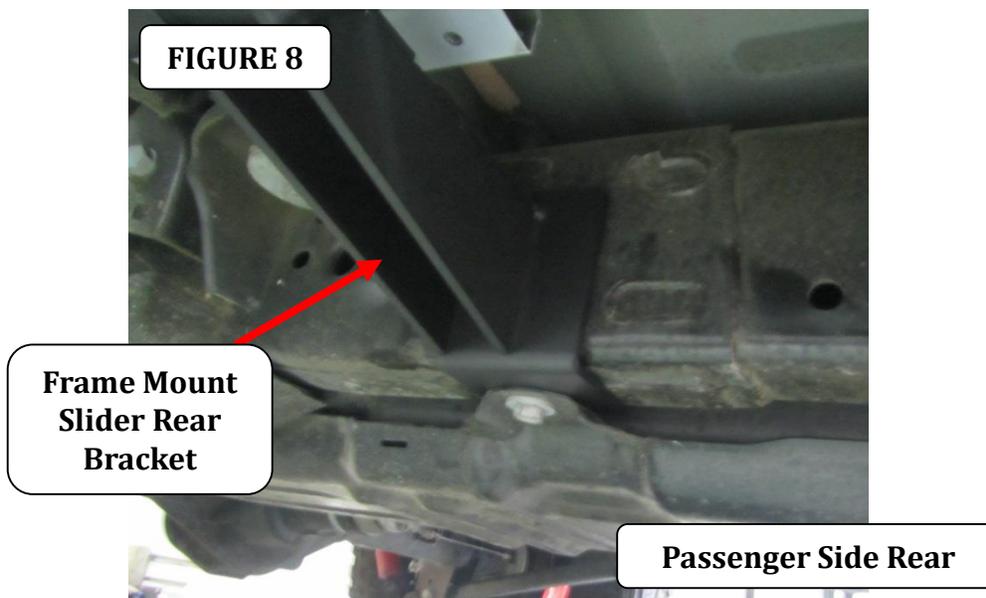




## INSTALLATION INSTRUCTIONS

**Step-7** Position a tube spacer between the center/rear brackets and the body mount and secure using (1) 3/8 x 2" Hex bolt, (2) 3/8" Flat washers and (1) 3/8" Lock nut. Figure 9. Leave the nut loose for final adjustment.

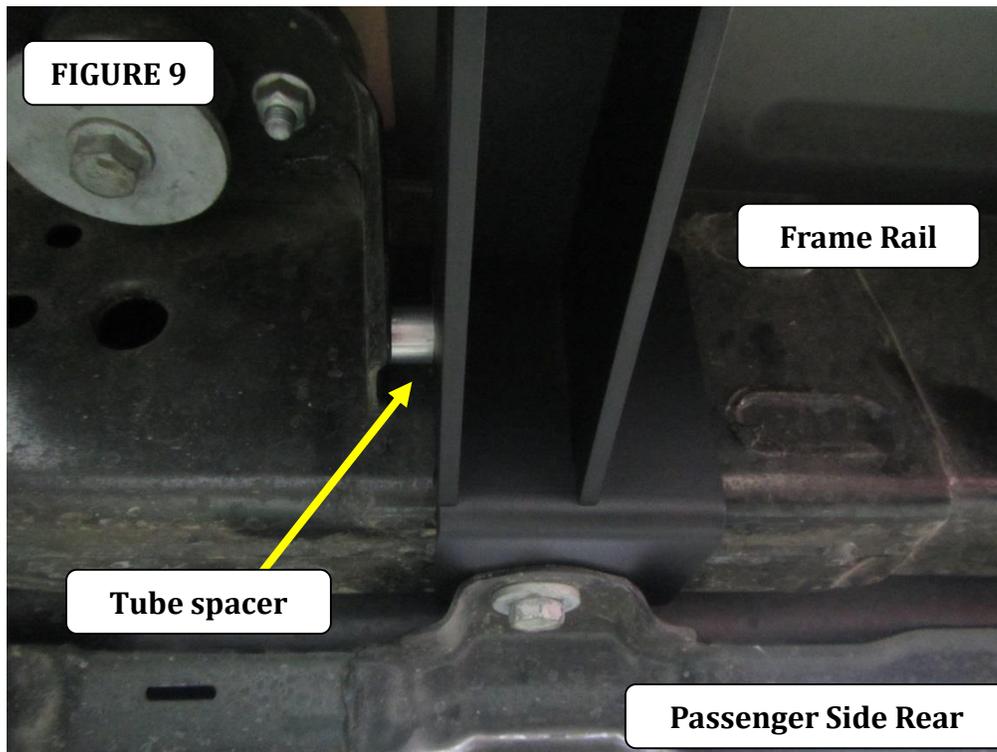

## INSTALLATION INSTRUCTIONS

**Step-8** Continue installation on the driver side at the front location, you will need to drill the top hole. Remove the factory bolt shown, Figure 10. Continue threading a bolt plate in the guide bolt then introduce it through the obround hole, the tip of the bolt guide must come out through the drilled hole of the frame rail. Do not pull out the bolt plate attached to the bolt guide.

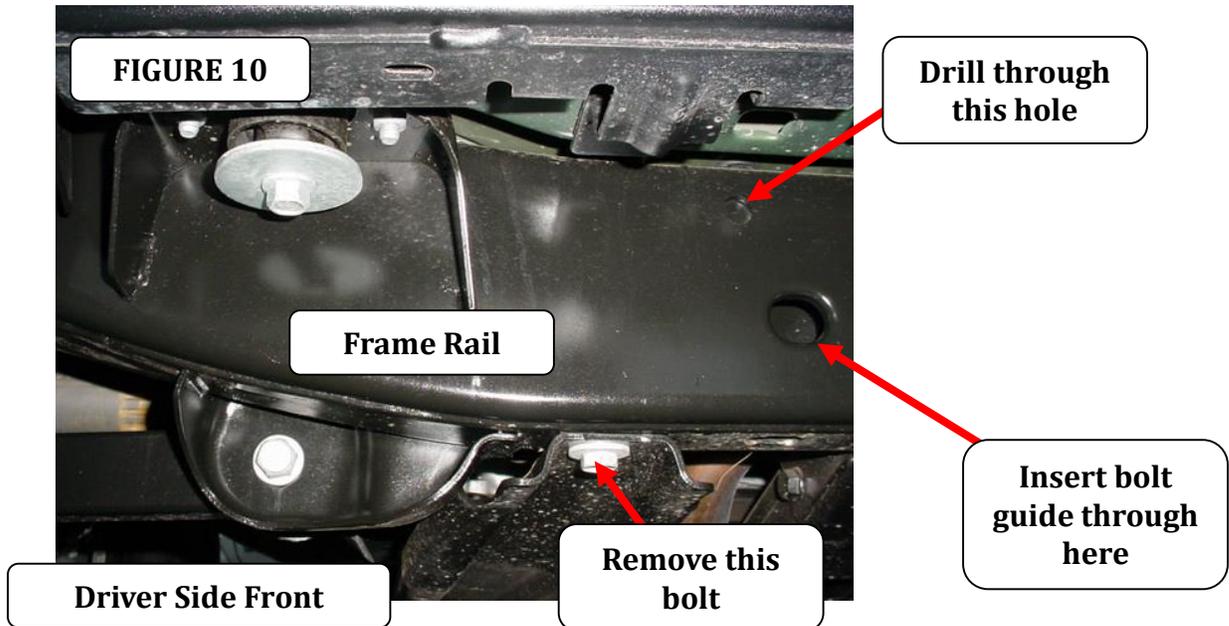

**Step-9** Pull out the bolt plate inside the frame rail; use a vinyl gasket to prevent the bolt plate from falling into the frame rail. Position the front bracket up to the frame rail. Carefully pass the bolt guide threads through the top hole in the front bracket. Position the bottom of the front bracket between the frame rail and the cross member. Once the bracket is in position. Secure it using (1) ½" flat washer, (1) ½" lock washer and (1) ½" hex nut. Use the factory bolt removed to secure to the bottom of the bracket, Figure 11. Leave the nut and bolt loose for final adjustment.




# GO RHINO®

## INSTALLATION INSTRUCTIONS

**Step-10** Drill a hole in the center cab mount wall as is described on step 4.

**Step-11** Position a tube spacer between the center bracket and the body mount, marked the bottom hole on the frame. Drill where you made the mark. Position the tube spacer between the center bracket and the body mount and secure using (1) 3/8 x 2" Hex bolt, (2) 3/8" Flat washers and (1) 3/8" Lock nut. Leave the nut loose for final adjustment.

**Step-12** Continue threading a bolt plate in the guide bolt then introduce it through a nearest hole, the tip of the bolt guide must come out through the bottom slot of the center bracket. Pull out through the bottom slot of the center bracket the bolt plate threads. Secure the center bracket to the bolt plate using (1) 1/2" flat washer, (1) 1/2" lock washer and (1) 1/2" hex nut. Figure 12. Leave the nut loose for final adjustment.

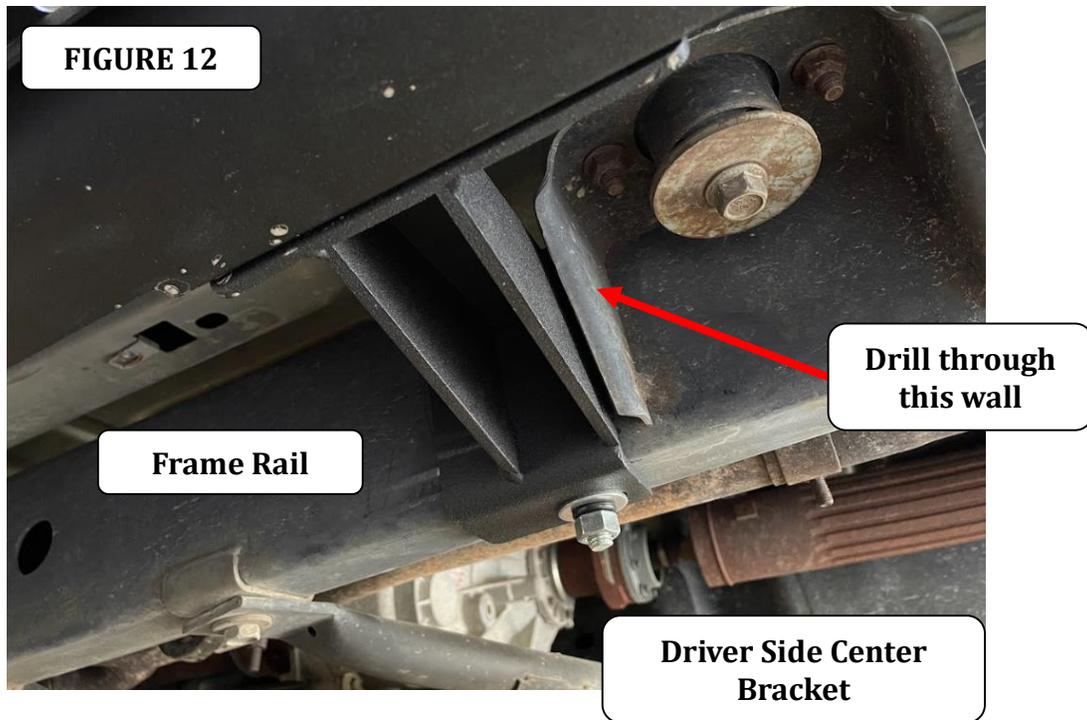


# GO RHINO®

## INSTALLATION INSTRUCTIONS

**Step-13** Drill a hole in the rear cab mount wall as is described on step 4.

**Step-14** Position a tube spacer between the rear bracket and the body mount, marked the bottom hole on the frame. Drill where you made the mark. Position the tube spacer between the bracket and the body mount and secure using (1) 3/8 x 2" Hex bolt, (2) 3/8" Flat washers and (1) 3/8" Lock nut. Leave the nut loose for final adjustment.


**Step-15** Continue threading a bolt plate in the guide bolt then introduce it through the existing hole, the tip of the bolt guide must come out through the bottom slot of the center bracket. Pull out through the bottom slot of the center bracket the bolt plate threads. Secure the rear bracket to the bolt plate using (1) 1/2" flat washer, (1) 1/2" lock washer and (1) 1/2" hex nut. Figure 13. Leave the nut loose for final adjustment.

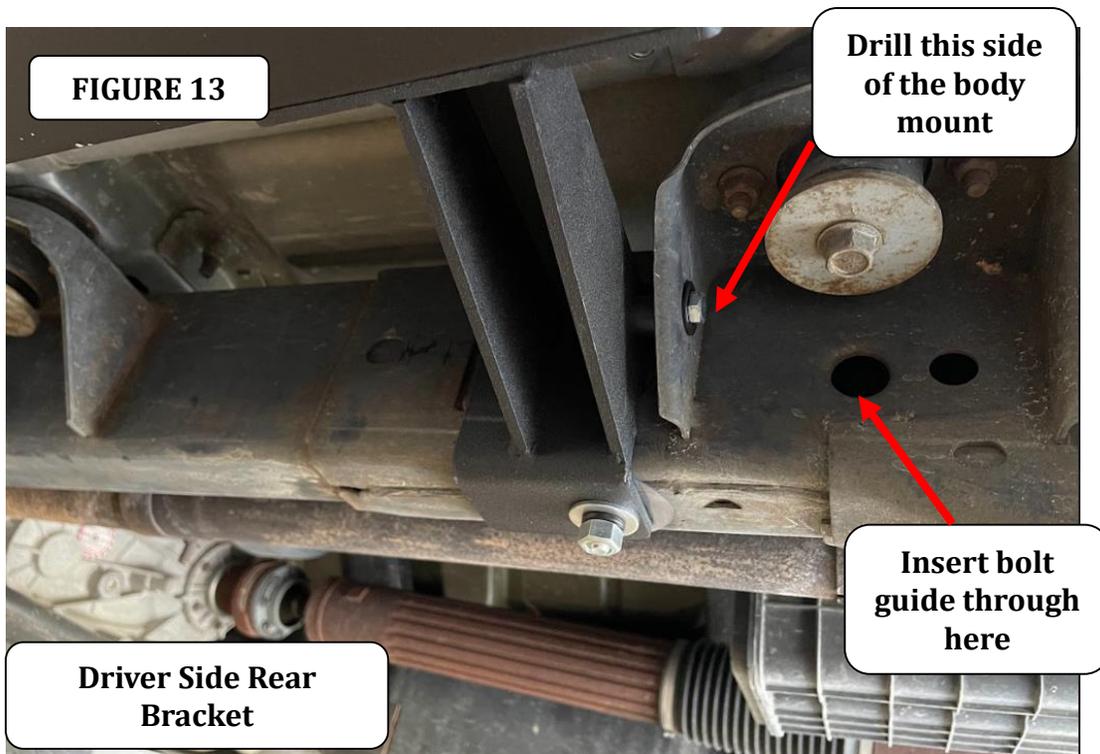

# GO RHINO®

## INSTALLATION INSTRUCTIONS

**Step-16** Attach the driver side Dominator running board to each bracket using (2) 3/8" x 1 1/4" hex bolts, (2) 3/8" lock washers, (2) 3/8" flat washers, and (1) 3/8" Nut-Plate (FIGURE 14). Leave the bolts loose for final adjustment.

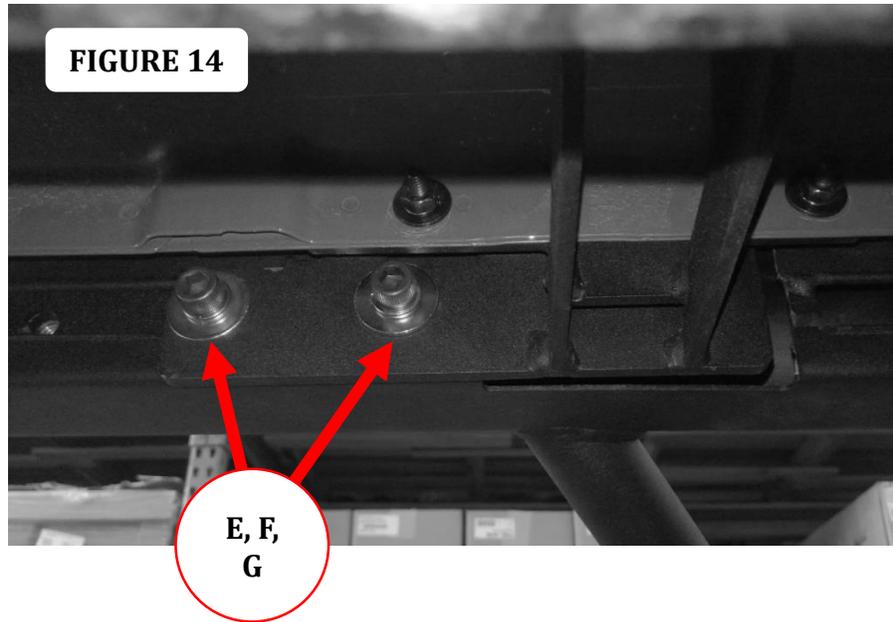

**Step-17** Align the Dominator running board with the vehicle and tighten all bolts securing the running board to the front, center and rear brackets. Repeat the above steps to install the passenger side running board.

**Remember to check and retighten the nuts and bolts every six months.**





# INSTALLATION INSTRUCTIONS

## LIMITED WARRANTY

Go Rhino warrants to Buyer that for a period of five (5) years from the date of shipment of the product(s) ("Warranty Period") for black finishes and chrome finishes, that such products will materially conform to the specifications set forth in Go Rhino's specifications in effect as of the date of shipment(s) and will be free from material defects in material workmanship.

Go Rhino warrants to Buyer that for the life of the product(s) from the date of shipment of the product(s) ("Warranty Period") for polished stainless steel finished products purchased after April 2004, that such products will materially conform to the specifications set forth in Go Rhino's specifications in effect as of the date of shipments and will be free from material defects in material workmanship.

Warranty claims must be accompanied with the original invoice and photos of the product. It is the customer's responsibility to clean regularly and protect finish with regular applications of a nonabrasive polish that is compatible with the product's finish.

This warranty covers the cost of the product only and does not include the cost of removal, installation, third party modifications or shipping of the product. In no event shall Go Rhino be liable to buyer or any third party for any damage or harm caused by the product or use thereof, regardless of whether such damages were foreseeable and whether or not Go Rhino has been advised of the possibility of such damages, not withstanding the failure of any agreed or other remedy of its essential purpose. This warranty is void if the product shows signs of alteration, misuse, mishandling, improper care, neglect, improper application and/or damage due to improper installation.

With respect to any such product(s) during the limited warranty period, Go Rhino shall, in its sole discretion, either: (i) provide a one-time repair or replacement of such products (or the defective part) or (ii) credit or refund the price of such products at the pro rata contract rate provided that, if Go Rhino so requests, Buyer shall, at Go Rhino's expense, return such product(s) to Go Rhino. The remedies shall be the Buyer's sole and exclusive remedy and Go Rhino's entire liability for any breach of the limited warrant(ies).

Go Rhino disclaims all other warranties except to the extent that any such warranty cannot be validly disclaimed under applicable law.

### **Finish Limited Warranty:**

Limited lifetime on stainless steel products (after April 2004)

5 year warranty on black powder coat products

5 year warranty on chrome products

This warranty does not cover exposed welds

Finish warranty covers peeling, flaking, or cracking. Washing all finishes regularly with car wash soap and rinsing well with water is the best method for maintaining the finish on your products. You must also protect the finish with nonabrasive automotive wax on a regular basis. The use of any compound which contains abrasives becomes a self-defeating exercise as the compound scratches the finish and opens it to corrosion. The use of harsh chemicals used to remove bugs and tar may also cause the finish to fail and should be avoided.

If you are unsatisfied with your purchase please contact the establishment you purchased the product from.

If you need to place a warranty claim or need assistance, the Go Rhino customer service team will answer any questions you may have. Please contact the Go Rhino customer service team at 1-888-427-4466 during normal business hours Monday thru Friday 7 am to 5 pm PST. You may also email [warranty@gorhino.com](mailto:warranty@gorhino.com). In order to better serve you please provide a copy of the original invoice / receipt, a photo of the issue you are experiencing and a photo of the vehicle the product is installed on.

All warranty returns must have an approved RGA number. The RGA number must be clearly marked on the exterior of the return package. All approved warranty returns must be shipped to Go Rhino Products, 810 Nafta Blvd Laredo, TX 78045

## PRODUCT REGISTRATION

Please remember to register your new purchase. You may register your product at [www.gorhino.com](http://www.gorhino.com). Registering your product may help speed any future warranty or customer service inquiries.

**Thank you again for purchasing from Go Rhino Products**

Please take a few minutes to view additional products for your vehicle and more at [GORHINO.com](http://GORHINO.com)  
These installation instructions are available on the Go Rhino web site along with installation videos for many of our products.

[www.gorhino.com](http://www.gorhino.com)

[www.bigcountryauto.com](http://www.bigcountryauto.com)

[www.gorhinopd.com](http://www.gorhinopd.com)