




I-SHEET NUMBER: INST-00055  
 PART NUMBER: ALL CREW CAB MODELS  
 PRODUCT: HOOP STEP  
 APPLICATION: 2014-2018 CHEVY/GM  
 CREW CAB

HARDWARE DESCRIPTION		QTY.
<b>HWKT-00424X</b>		
CLIP-00643	M8-1.25 X 20MM BARREL U-NUT CLIP	2
HHCS-00647	M8-1.25 X 25MM CLASS 8.8 HEX CAP SCREW	12
HXNT-00708	M8-1.25 CLASS 8 FINISHED HEX NUT	6
FDRW-00736	M8 FENDER WASHER	18
PARTS INCLUDED		QTY
DRIVER SIDE		
PASSENGER SIDE		



### N-FAB NERF STEP SYSTEM

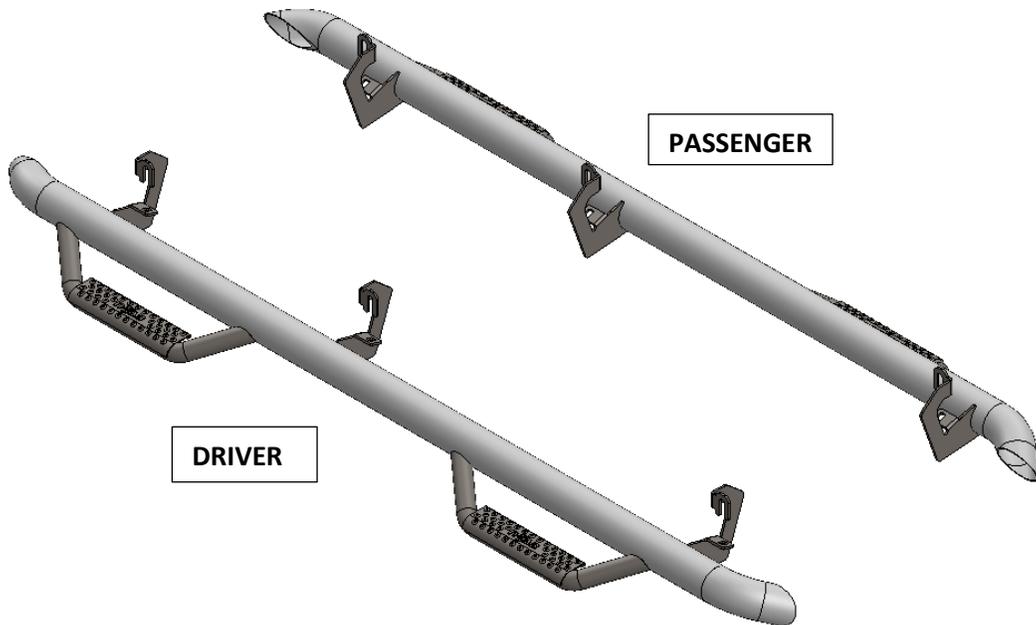

**Step 1:** Starting with the Driver side, Look on the underside of the body and locate the factory supplied mounting positions. **NOTE: Some vehicles require the use of speed clips and nuts, which are supplied with the hardware kit.**

**Step 2:** If your vehicle requires the use of the speed clips, install at this time. This requires the removal of a plastic body plug. Using a flat head screwdriver remove the plug and install one of the supplied speed clips.



**Step 3:** Install the Nerf Step to the mounting locations in the body of the vehicle and install hardware. Do not tighten all the way. **NOTE: Some vehicles may require the use of additional nuts and washers for the lower portion of the mounting bracket which are supplied in the hardware kit**



**Step 4:** Next, tighten all hardware beginning with the lower mounts first then the upper mounting locations.



**Step 5:** Re-peat steps 2-4 for passenger side.