



PART NUMBER: G151MRDS

PRODUCT: RDS BUMPER

APPLICATION: 15-17 CHEVY
COLORADO

Parts Included:	Qty
RDS Bumper	1



STOP! READ ENTIRE INSTUCTIONS BEFORE ATTEMPTING THIS INSTALL

INSTRUCTIONS:

Bumper Removal:

Step 1:

Remove the six lower inner fender bolts using a T-15torx bit. (Both sides)

Step 2: Unplug the fog light connectors on both sides.

Step 3: Remove the two bolts that attaches the front fascia to the truck. (Both sides)

Step 4: Remove the three bolts holding the front fender valance. The bolts are located behind the inner fender liner. (Both sides)

Step 5: Under the hood, remove the nine push pins that attach the core support cover.

Step 6: Remove the six T-15 torx bolts that attach the grill to the truck.

Step 7: Remove the grill and fasia from the vehicle.


Step 8: Remove the three plastic clips holding the air dam. Release the clips on each side and remove.

Step 9: Remove the four 15mm bolts that attaches the bumper bar and remove. NOTE: Save the OE bumper bolts to reuse.

Step 10: Remove the 18mm tow hook bolts and remove tow hooks. (both sides)

Trim Valance:

Step 1: Measure 2 ¼" up from the bottom of the valance in several locations. Using masking tape and a straight edge make a trim line extending into the side sections. **(figA)**

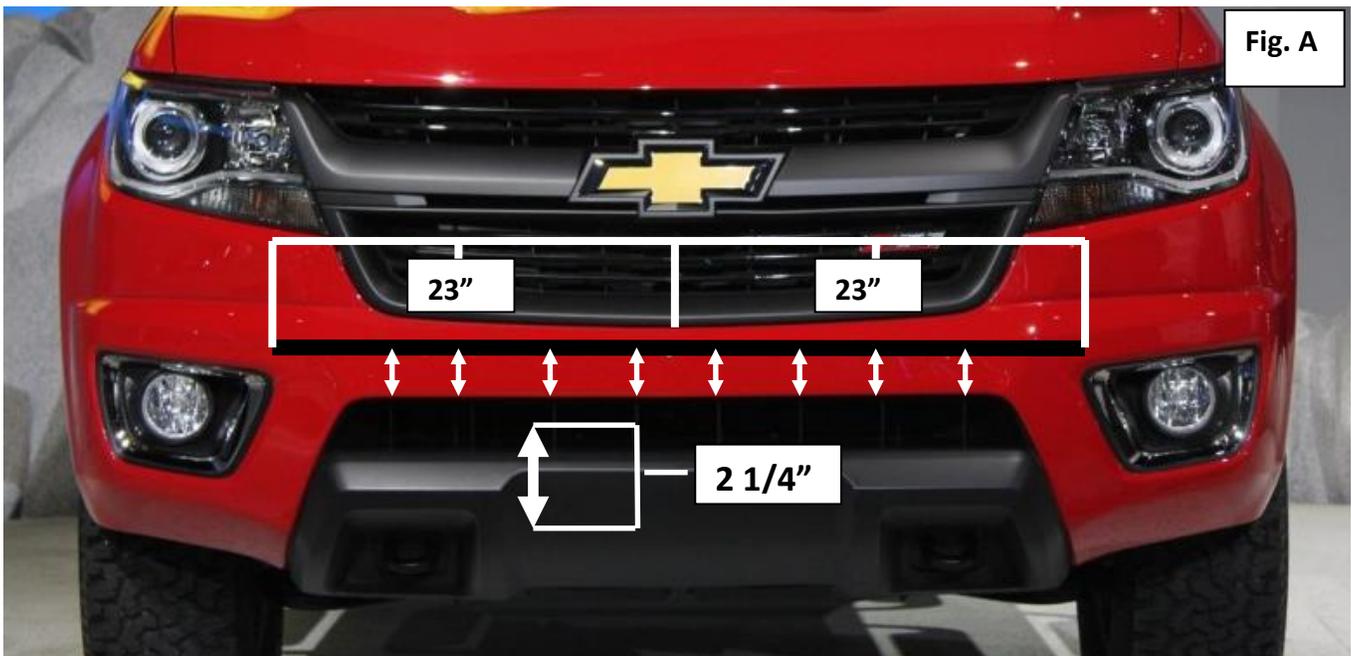

Step 2: Use the center crease in the valance and measure 23" in both directions. **(Fig. A)**

Step 3: Measure 7" from the highest tip of the valance downward and make a mark. Measure from the corner of the valance (fender side) downward following the curve, make a mark at 3 ¼". Next measure 3 3/8" on the body line next to the (3 ¼") measurement and make a mark. **(Fig B)**

Step 4: Follow the 23" vertical line and extend it upwards until it reaches the body line below the head light. Measure from the body line down and make a mark at 3 ½". Use a straight edge and connect the marks drawn in steps 3-4

Step 5: Repeat these steps with opposite side.

Step 6: Cut the bottom portion of the valance using these marked lines.
(Fig. C, D)

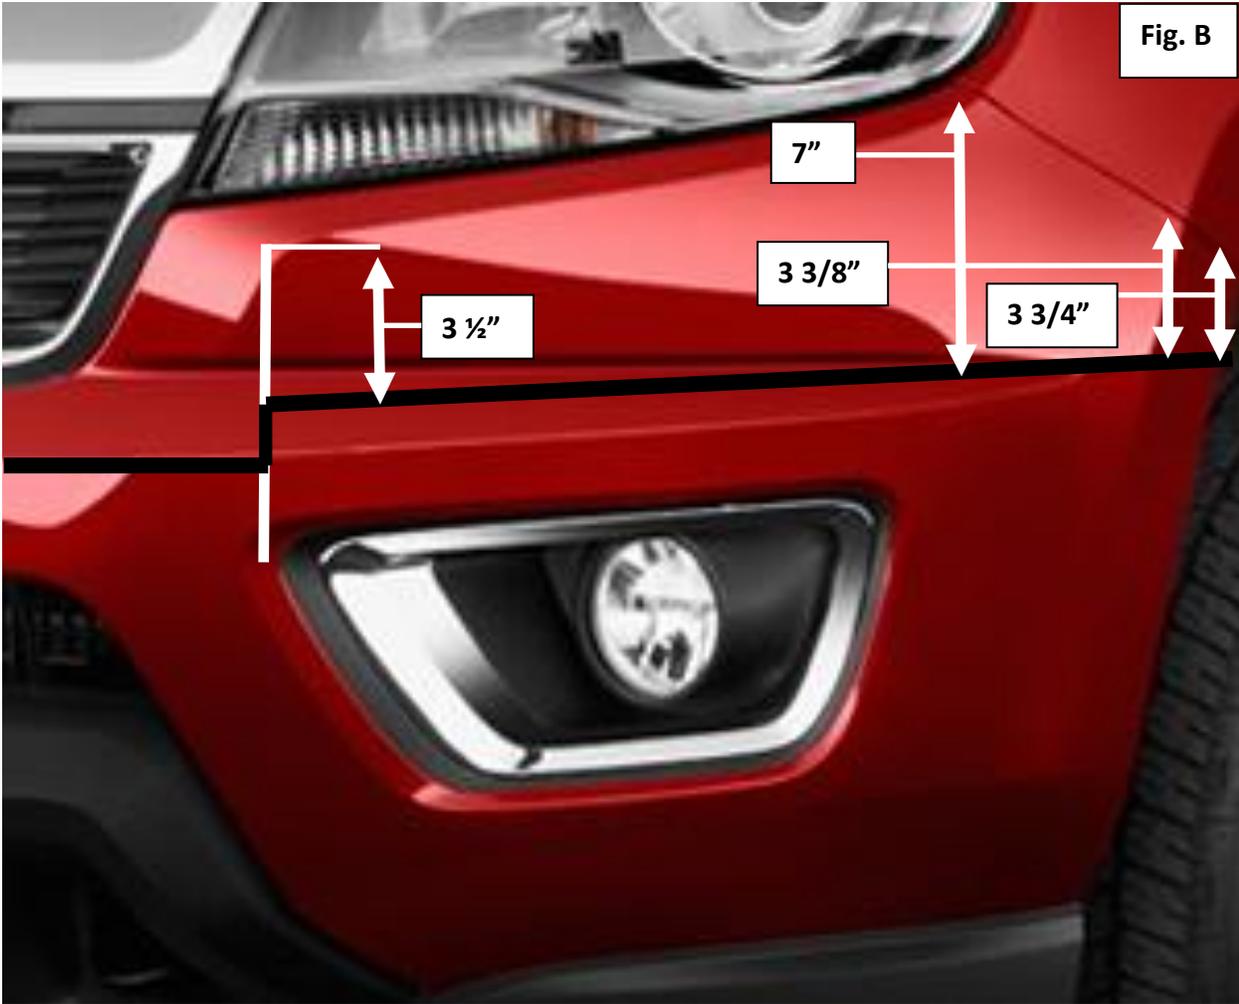




Fig. C



Fig. D

Bumper Install:

Step 7: Remove the RDS skid plate.

Step 8: Using the OE bumper bolts install the RDS bumper and fully tighten.

Step 9: Install RDS skid plate and fully tighten. Your RDS bumper install is now complete.

