




I-SHEET PART NUMBER: INST-00318
 PART NUMBER: HPN0570CC-TX/SS
 PRODUCT: PODIUM HOOP STEP
 APPLICATION: 05-21 FRONTIER CC

HARDWARE DESCRIPTION	QTY.
M8 zinc flanged nut	12
M10X25mm carriage bolt	12
M10 hex nut	12

PARTS INCLUDED	QTY
Driver side step	1
Passenger side step	1
Mounting Bracket	6




Step 1. Identify driver side step.

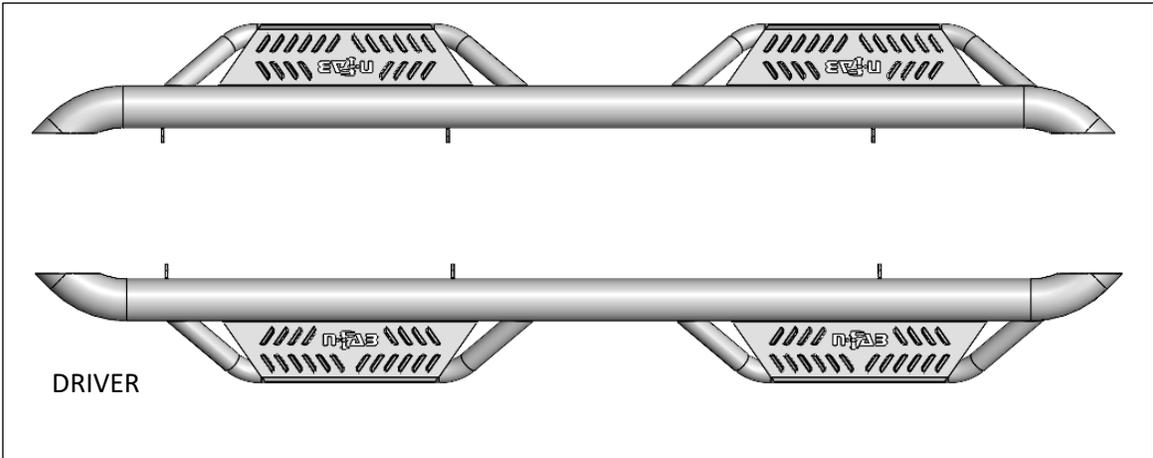

Step 2: Install the (x6) mounting brackets to each attachment point on the main tube using the supplied M10x25 carriage bolts, M10 hex nuts and leave loose for now.

**** **NOTE:** *The brackets will attach to the backside of the mounting flange with the threaded end of the carriage bolt facing towards the REAR of the step. ****

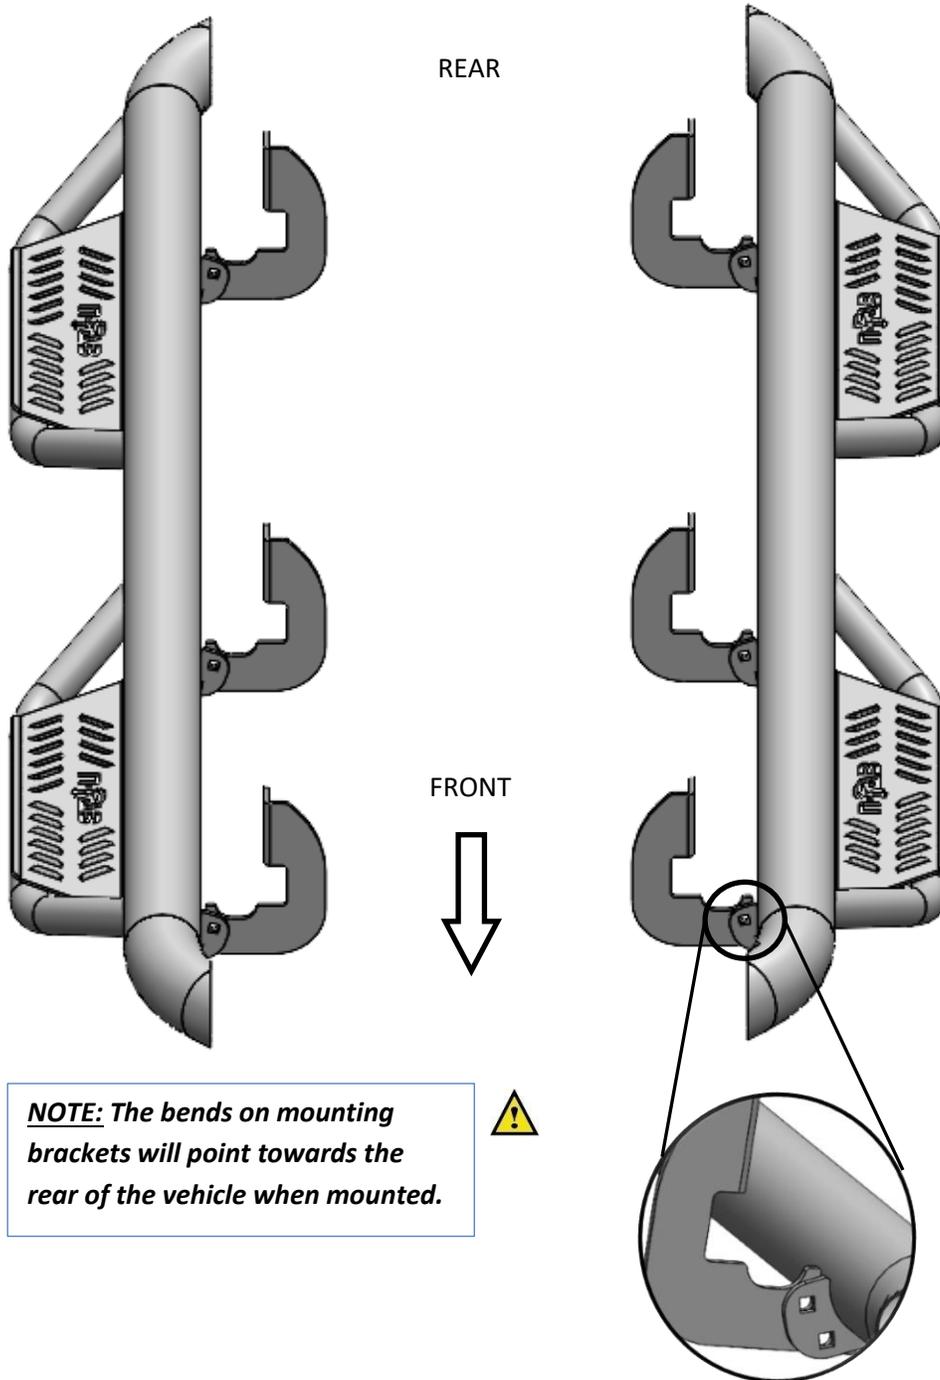

Step 3. Remove OE boards if equipped and discard. Locate the mounting studs located underneath the body of the vehicle. Clean any dirt and debris from the studs and surface.




Step 4. Carefully place step into position on OE mounting studs.
Step 5. Start the supplied M8 flanged nuts (x6) and hand tighten.



Step 6. Begin tightening nuts in an alternating pattern. ***NOTE: Over tightening could strip or break studs.*** Tighten to 20 (ft/lbs) torque to secure to vehicle.



Step 7. After final adjustment, tighten all three brackets at the main tube.

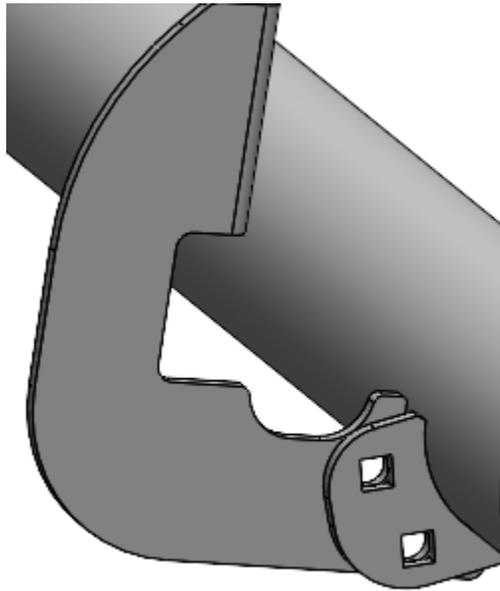

Step 8. Repeat steps 3-7 for passenger side install.