




I-SHEET PART NUMBER: INST-00241
PART NUMBER: **F9584V**
PRODUCT: **NERF STEP**
APPLICATION: **92- 2015 VAN**

HARDWARE	QTY
5/16" X 1 1/4" Carriage bolt	6
5/16" nut	6
5/16 washer	6

PARTS INCLUDED	QTY
Driver side step	1
Passenger side step	1



Step 1. Locate driver side

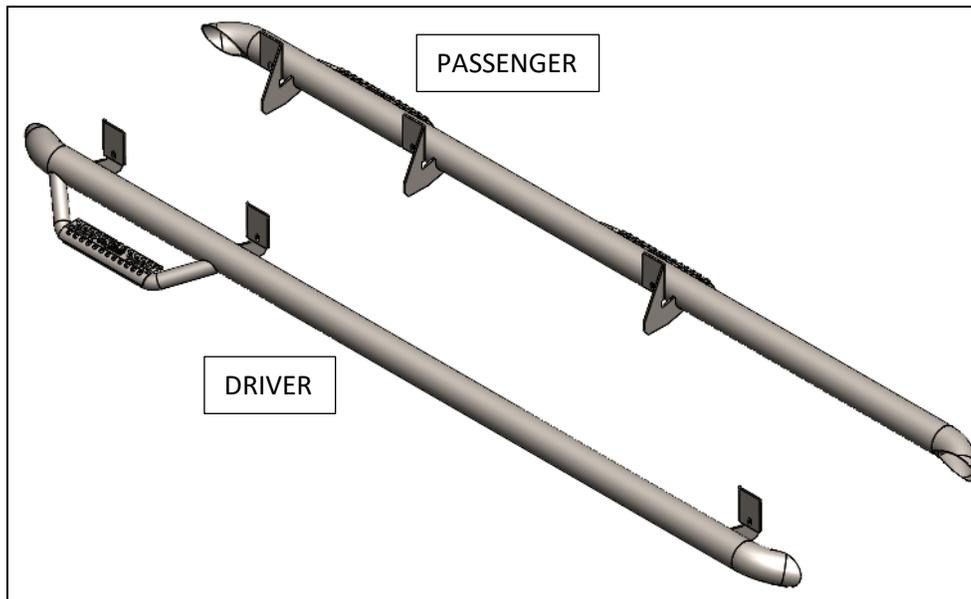

Step 2. Use two jack stands and set step even with the pinch weld with the bracket on the backside of the body.

Step 3. Measure approximately 3" behind the fender well. ****NOTE**** *If you have oversized tires, be sure you have enough clearance for steering.*






I-SHEET PART NUMBER: INST-00241
PART NUMBER: **F9584V**
PRODUCT: **NERF STEP**
APPLICATION: **92- 2015 VAN**

Step 4. Align bracket approximately 1/8" from the bottom edge of the pinch weld and make a mark through the mounting hole in the (x3) bracket.

Step 5. Next, drill each marked hole using a 3/8" bit.

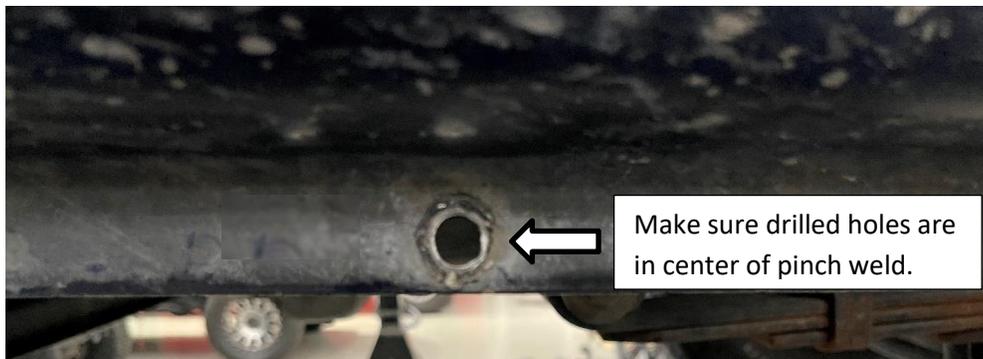

Step 6. Align the brackets up with the drilled holes and attach using the supplied 5/16" carriage bolt, nut and washer. **** NOTE**** *The carriage bolt will start from the outside and fasten from the backside of the pinch weld.*

Step 7. Tighten each bolt to 18-20 ft./lbs torque.



Step 8. Repeat steps 2-7 with passenger side.

