




VSG59 Rev. B

Installation Instructions for Ventshade Rain Deflector

- 1. Rain deflectors are stamped to show position, LF for left front, RF for right front. Etc.**
- 2. Insert shade end – flange between w/strip and outer door, or quarter panel. (See Sketch). NOTE: For proper installation, flange should completely disappear and shade curves fit flush up, to window frame. Wherever flange does not go flush up, insert putty knife at that point, and slightly loosen W/strip.**
- 3. If W/strip bead overlaps the vent wing division post, clip off overlapping portion.**
- 4. With the rain deflector in position, center punch and drill 7/64 inch diameter hole through hole in shade nearest division post and install one of the screws furnished.**
- 5. Holding shade in position, center punch and drill remaining holes and insert screws. NOTE: holes should be drilled at 90 degrees to surface of metal. Drilled holes should be touched up with paint to prevent rusting, and caulking compound placed on screws to seal holes.**

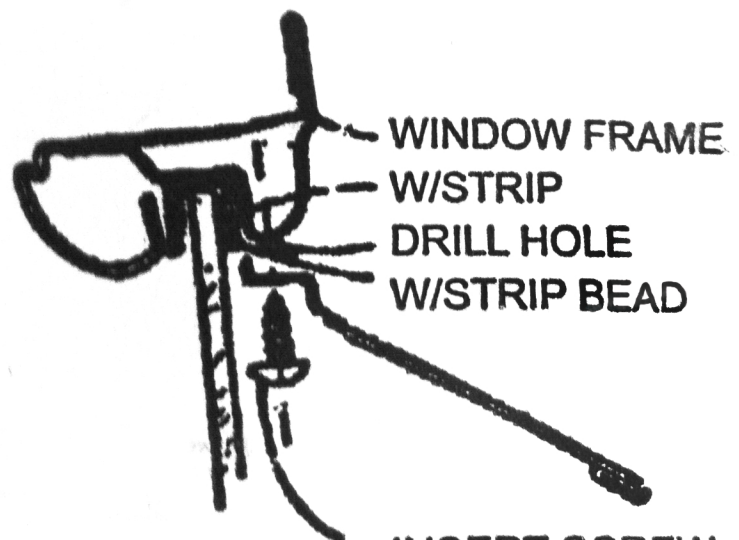

**INSERT SCREW
BY ABOVE
INSTRUCTIONS**

NOTE:

**Wipe Rain Deflector after
installation with clean cloth
using metal cleaner or polish.**