



YJ STEERING BRACE KIT

Thank you for choosing Rough Country for your Jeep off road needs.

Please read all the instructions before beginning the installation.

PRODUCT USE INFORMATION

We will be happy to answer any questions regarding our products by calling us @ 731-285-9000 .Rough Country will not be responsible for any product that is altered.

INSTALLATION INSTRUCTIONS

1. Loosely install the steering brace as shown in **Photo 1** to steering box with supplied 3/8" u-bolts and hardware. **Torque to 10 ft/lbs.**
2. Position the steering brace over the stock holes in the frame and install the two 7/16" x 3 1/2" bolts with the supplied crush sleeves through the frame as shown in **Photo 2**.

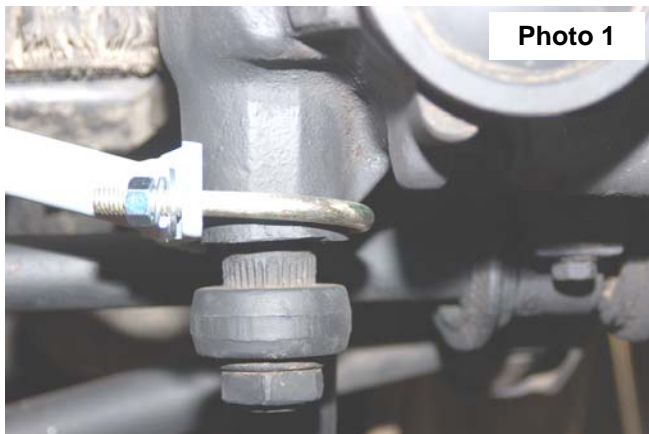


Photo 1



Photo 2

3. Check to make sure the steering brace does not interfere with the pitman arm and tighten all fasteners.



POST INSTALLATION

1. Check all fasteners for proper torque. Check to ensure there is adequate clearance between all rotating, mobile, fixed and heated members. Check steering for interference and proper working order.
2. Re torque all fasteners after 500 miles. Visually inspect components and re torque fasteners during routine vehicle service.