



GM 2014-15 Chevy 1500 Mesh Grille

Thank you for choosing Rough Country for all your lighting needs.

▲ NOTICE Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go. If question exist, please call us @ 1-800-222-7023. We will be happy to answer any questions concerning the design, function, and correct use of our products.

▲ NOTICE Only fits **2014-15 Chevrolet 1500** models.

▲ NOTICE Will not fit Z71 model grilles.

Tools Needed:

- 7mm Socket/Wrench
- 10mm Socket/Wrench
- Flat Screwdriver
- Reciprocating Saw
- 11/64" Drill
- Drill Motor
- 7/16" Socket/Wrench
- 11/32" Socket/Wrench
- 3/32" Allen
- 5/32" Allen Wrench
- Ratchet


Kit Contents 70101

- (2) Grille Trim Ring
- (2) Mesh Grille
- (1) Instructions
- (1) 70101BAG1
 - (8) LH Mounting Brackets
 - (8) RH Mounting Brackets
- (1) 70101BAG
 - (16) 1/4" x 5/8" Button Head Allen Bolts
 - (26) 1/4" x 1/2" Button Head Allen Bolts
 - (42) 1/4" Nylock Nuts
 - (16) #8 x 1/2" Button Head Allen Bolts
 - (16) #8 Lock Nuts


Kit Contents 70103 w/ Black Series LED

- (2) Grille Trim Ring
- (2) Mesh Grille
- (1) Instructions
- (1) 30" Single Row Curved LED
- (2) Light Mounting Brackets
- (1) 70101BAG1
 - (8) LH Mounting Brackets
 - (8) RH Mounting Brackets
- (1) 70102BAG
 - (18) 1/4" x 5/8" Button Head Allen Bolts
 - (32) 1/4" x 1/2" Button Head Allen Bolts
 - (50) 1/4" Nylock Nuts
 - (16) #8 x 1/2" Button Head Allen Bolts
 - (16) #8 Lock Nuts


70101

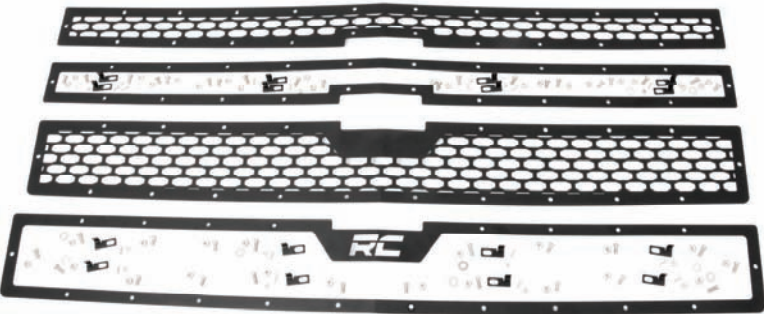



70103

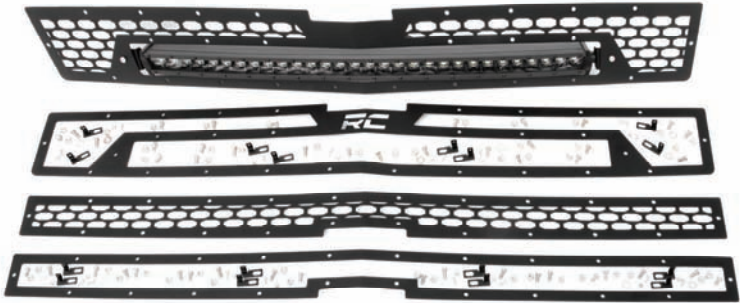


1. Park the vehicle on a smooth level surface.
2. Open the hood and using a flat screwdriver, remove the push pins and radiator cover and save for reuse. **See Photo 1.**
3. Using a 7mm, remove the bolts from inside the fender well, holding the upper fascia. Retain for reuse. **See Photos 2 & 3.**

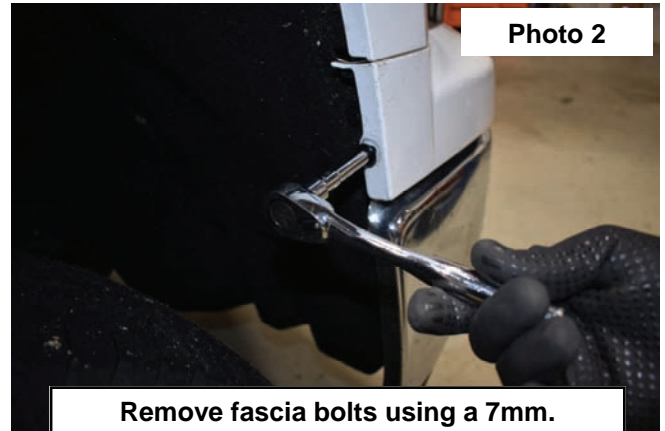


4. Gently pull the upper fascia at the fender well to release from the fender liner. **See Photo 4.**

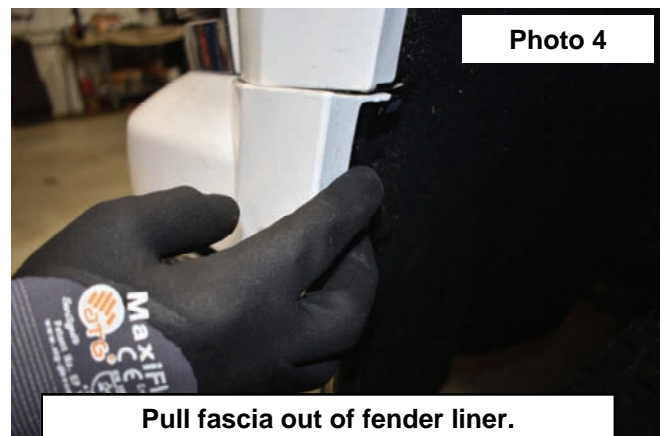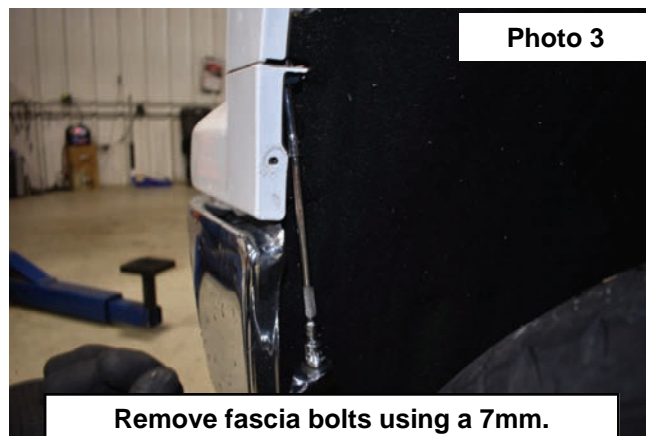


5. Under the front bumper, unclip the fascia clips. **See Photo 5.**

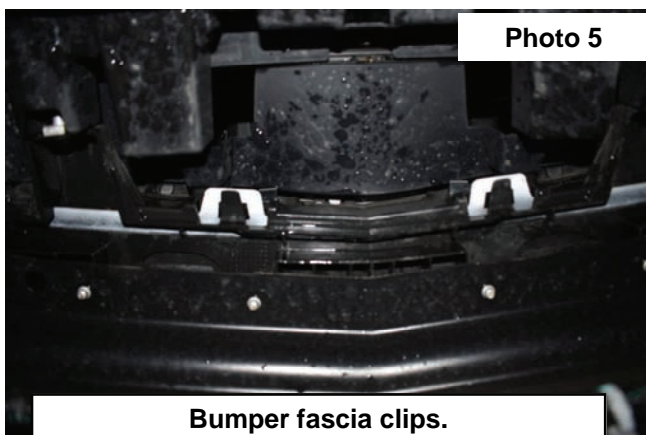

6. Gently pull the fascia from the front of the vehicle. **See Photo 6.**
7. Using a 10mm socket, remove the grille mounting bolts and save for reuse. **See Photo 7.**

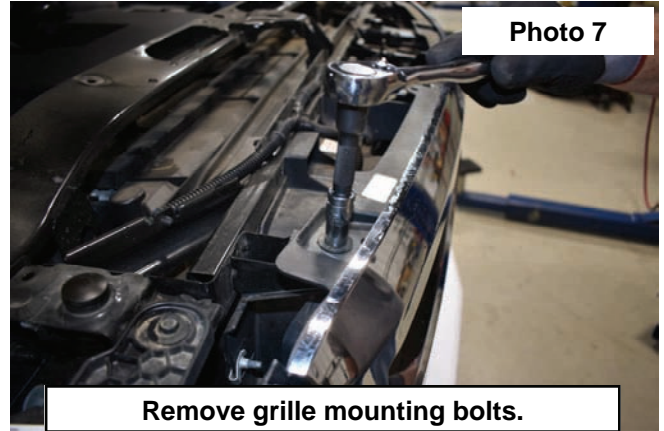



8. Using a 10mm socket, remove the 4 lower grille mounting bolts. **See Photo 8.**
9. Pull the grille from the front of the truck. **See Photo 9.**

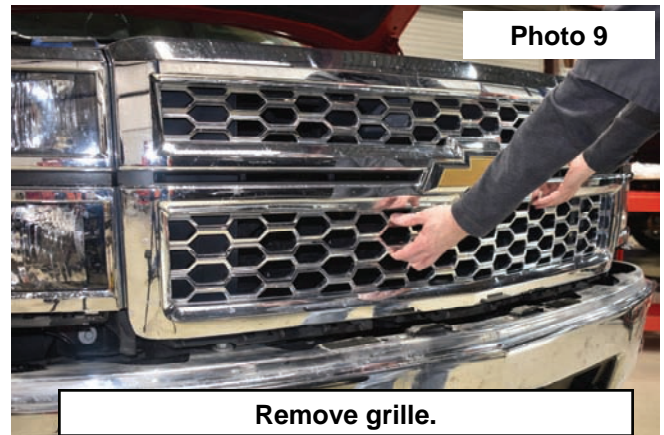



10. Lay the grille face down and remove the 4 shroud bolts using a 7mm socket. Retain hardware for reuse. **See Photo 10.**
11. Pull the shroud off of the grille and save for reuse. **See Photo 11.**





12. Using a reciprocating saw, cut the inner grille mesh along the horizontal lines of the grille. **See Photo 12.**
13. Using a reciprocating saw, cut the inner grille mesh along the vertical lines of the grille. **See Photo 13.**
14. Repeat steps 13 & 14 for the upper section of the grille.

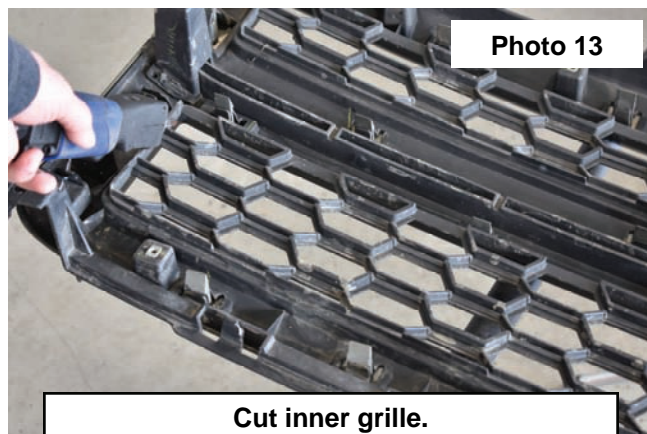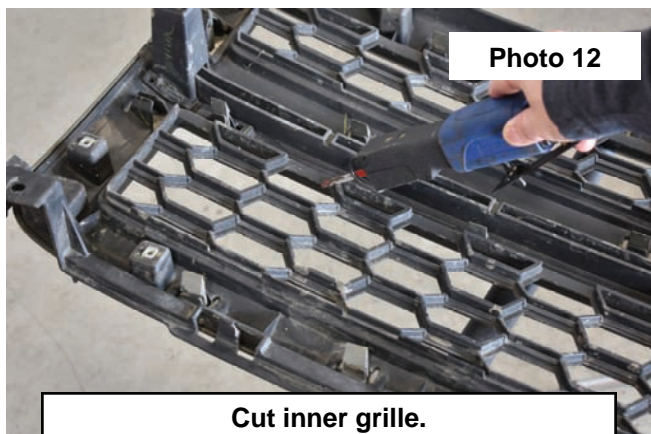



15. Remove the cutout inner mesh pieces. **See Photo 14.**
16. Assemble the lower grille trim and the lower grille mesh using the supplied 1/4" x 5/8" bolts and nuts (**Do not tighten**) through the mounting brackets, **See Photo 15**, and the supplied 1/4" x 1/2" bolts and nuts in the remaining holes. Tighten bolts not going through a mounting bracket using a 5/32" Allen and a 7/16" wrench. **Do not rotate the head of the bolt when tightening. You may have to bend the mesh grille to follow the lines of the factory grille trim.**

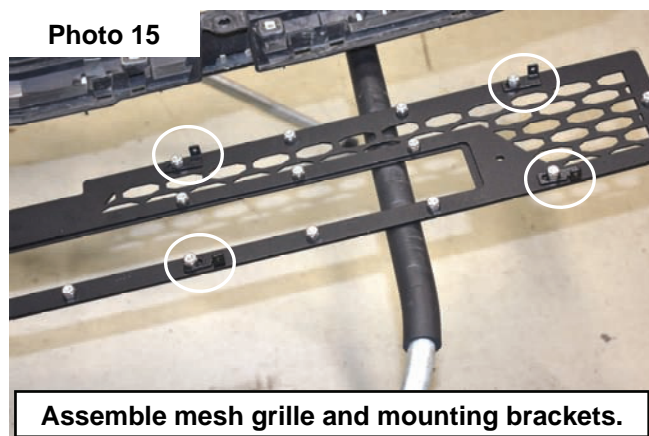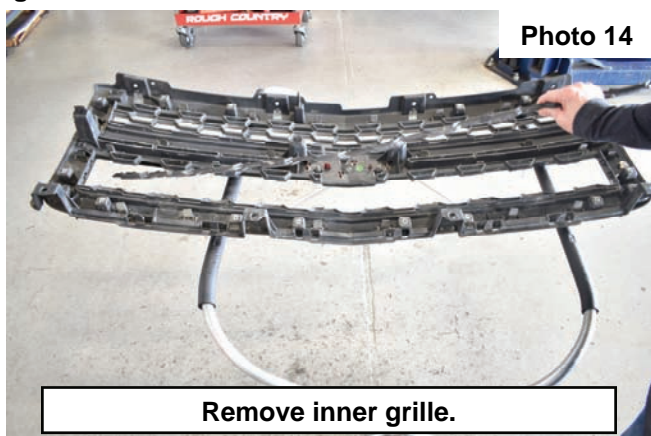



17. Using the mounting bracket as a guide and drill the 8 mounting holes into the factory grille shell using a 11/64" drill. **See Photo 16. It may be necessary to trim the grille at some mounting locations to clear the mounts. See Photo 16.**
18. Using the supplied #8 x 1/2" bolts and nuts, attach the mounts to the grille and tighten using a 3/32" Allen and a 11/32" wrench. **See Photo 17.**

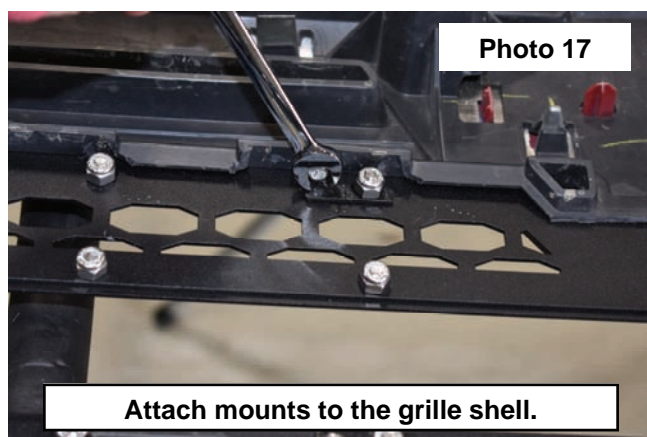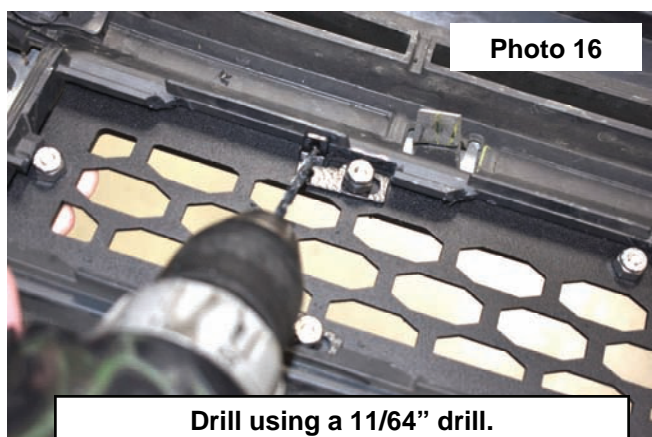



19. Tighten the 1/4" bolts using a 5/32" Allen and a 7/16" wrench. **Do not rotate the head of the bolt when tightening. See Photo 18.**
20. If installing grille with no light, skip to step 23.
21. If installing the mesh grille with the 30" LED, install the light mounting brackets using the supplied 1/4" x 5/8" bolts and nuts. **Do Not Tighten. See Photo 19.**
22. Install the light on the brackets and tighten using the supplied Allen, then center and tighten the mounting bolts on the grille using a 5/32" Allen and a 7/16" wrench. Wire the light according to the instructions included with the light.

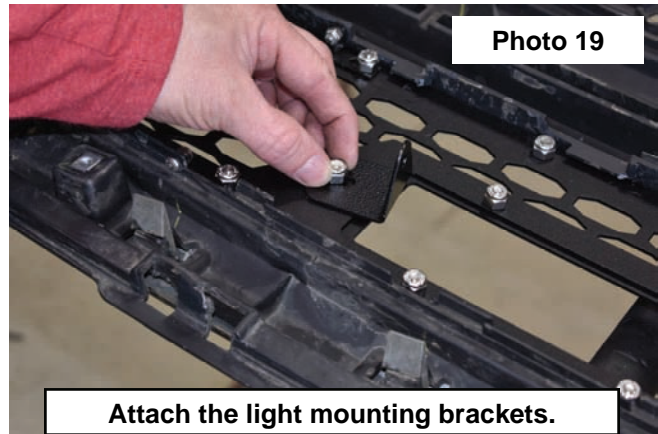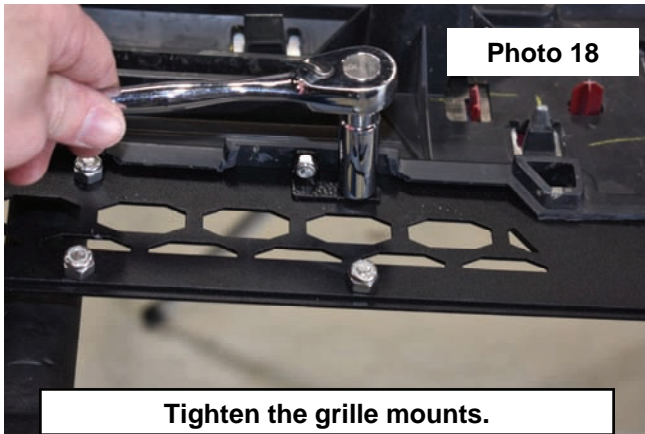



23. Assemble the upper grille trim and the upper grille mesh using the supplied 1/4" x 5/8" bolts and nuts (**Do not tighten**) through the mounting brackets, **See Photo 20**, and the supplied 1/4" x 1/2" bolts and nuts in the remaining holes. Tighten bolts not going through a mounting bracket using a 5/32" Allen and a 7/16" wrench. **Do not rotate the head of the bolt when tightening. You may have to bend the mesh grille to follow the lines of the factory grille trim.**
24. It may be necessary to trim the grille at some mounting locations to clear the mounts. **See Photo 21.**

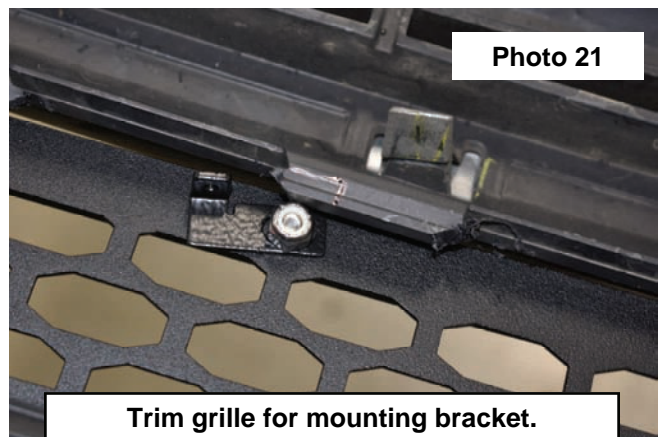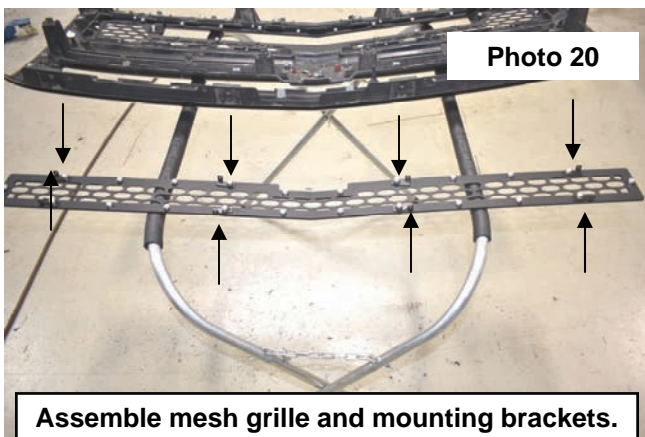

25. Trim using a reciprocating saw. **See Photo 22.**
26. Using the mounting bracket as a guide and drill the 8 mounting holes into the factory grille shell using a 11/64" drill.

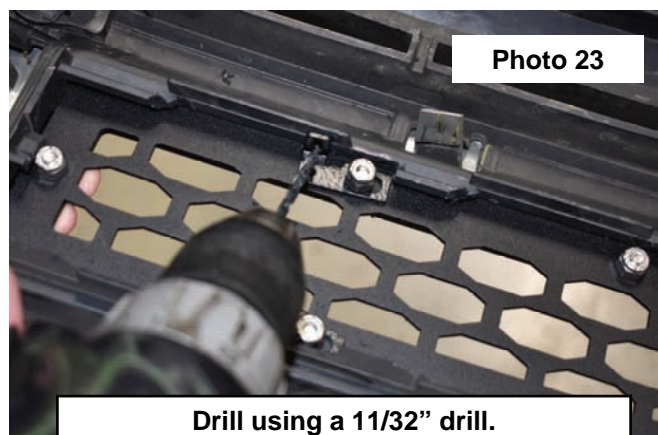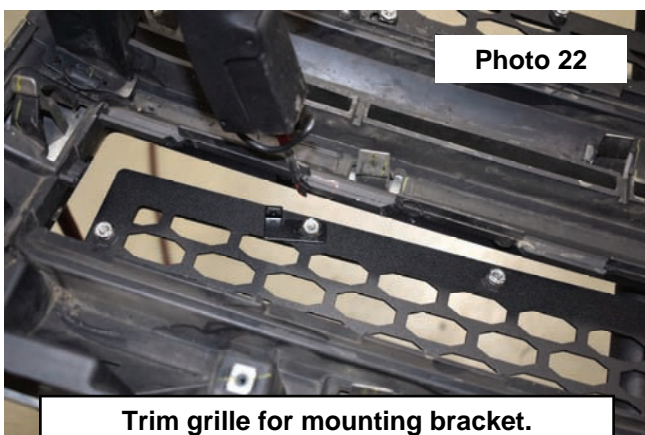

27. Using the supplied #8 x 1/2" bolts and nuts, attach the mounts to the grille and tighten using a 3/32" Allen and a 11/32" wrench. **See Photo 24.**
28. Tighten the 1/4" bolts using a 5/32" Allen and a 7/16" wrench. **Do not rotate the head of the bolt when tightening. See Photo 25.**

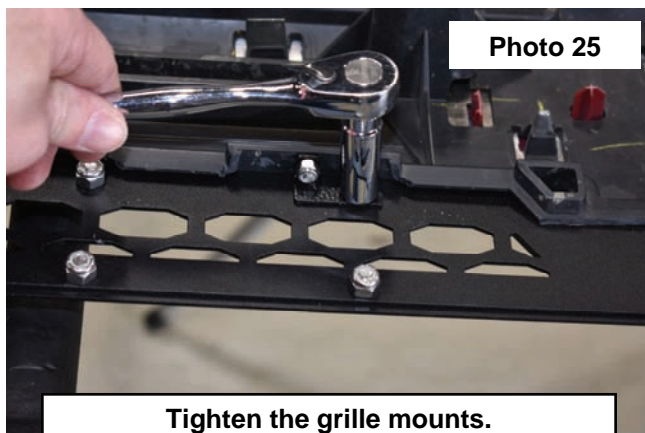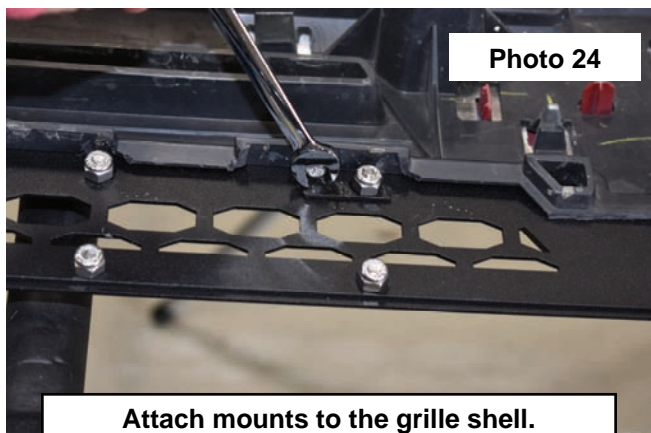

29. Install the grille assembly onto the truck using the factory hardware and a 10mm socket. **See Photo 26.**
30. Attach the bumper fascia using the factory hardware and tighten using a 7mm socket. Make sure fascia is clipped into the factory clips. **See Photo 27.**



31. Install the radiator cover using the factory push pins.



By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable , State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

