

PART NO. 87350

Instruction Sheet CAMBER KIT

This part should only be installed by personnel who have the necessary skill, training and tools to do the job correctly and safely. Incorrect installation can result in personal injury, vehicle damage and / or loss of vehicle control.

Plan Ahead - Read All Instructions BEFORE installing part.

Check for loose or worn parts, proper tire pressure, and odd tire wear patterns before beginning alignment.

NOTE: Install one (1) side at a time and use two (2) jacks to install this kit.

1. Place a single jack under the lower control arm about 2-5 inches from the inner attach bolt.
2. Place a second jack as far outboard (towards the wheel) as safely possible.
3. Remove the bolt attaching the lower control arm to the mounting bracket and, using the enclosed template, scribe the elongated hole on the mounting bracket.

NOTE: the template shows which side of the hole should be elongated for positive or negative camber changes.

4. Carefully lower the inboard most jack just enough to clear the bolt hole.

CAUTION: to prevent the loss of the spring, do not drop the control arm out of the frame bracket.

5. Using a 3/8 inch drill and the P/N 85130 rotary file set, elongate the hole to the scribe marks.
6. Raise the inboard most jack and align the bolt holes. Install one cam washer on bolt and install bolt in vehicle. Place other cam washer on bolt and tighten nut loosely.
7. Remove the jacks, jounce the vehicle and turn the bolt to set the camber to the desired readings. Torque the nut to manufacturers' specifications while holding the cam bolt in position.
8. Complete alignment and road test vehicle.

Always check for proper clearance between suspension components and other components of the vehicle.



**Specialty
Products
Company®**

4045 Specialty Pl • Longmont, CO 80504 • (303) 772-2103


For warranty information go to: www.specprod.com/warranties

www.specprod.com • Email: info@specprod.com Printed in U.S.A.

Toll Free Technical Hot Line: 1-800-525-6505

ECN#3527

©2024 Niwot Corp. dba Specialty Products Co. • Form No. 87350INS • Rev. A

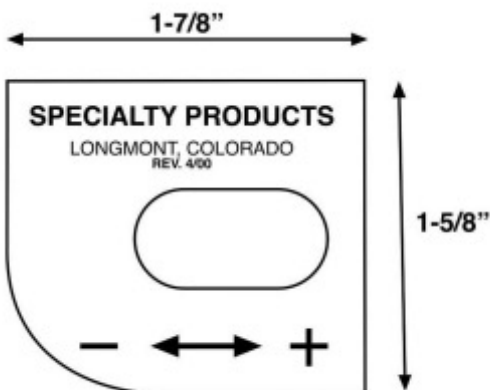

**Specialty
Products
Company®**

4045 Specialty Pl • Longmont, CO 80504 • (303) 772-2103

For warranty information go to: www.specprod.com/warranties

www.specprod.com • Email: info@specprod.com Printed in U.S.A.

Toll Free Technical Hot Line: 1-800-525-6505

ECN#3527

©2024 Niwot Corp. dba Specialty Products Co. • Form No. 87350INS • Rev. A