


**For TKO Installation**

Place spacers between trans mount and trans housing as shown and attach with supplied bolts & washers.

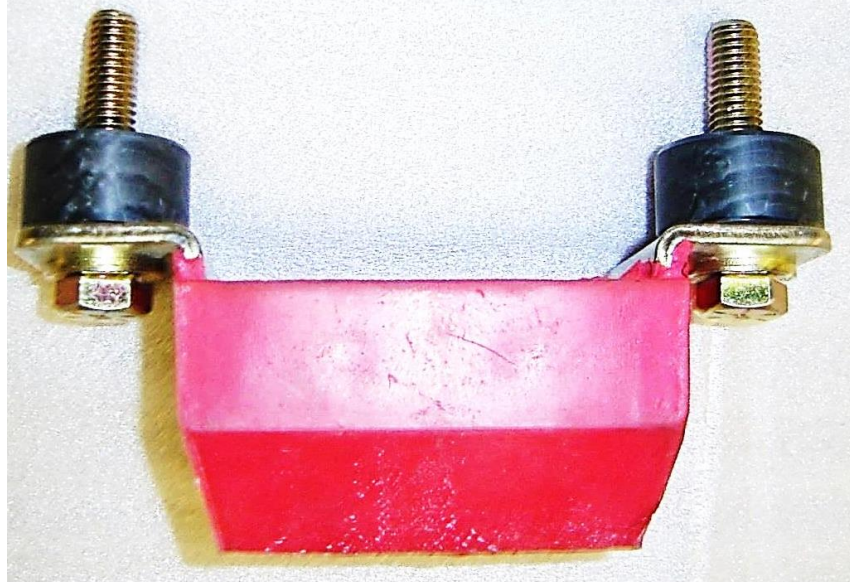

**For TKO Installation**

Place spacers between trans mount and trans housing as shown and attach with supplied bolts & washers.

