

BODY ARMOR 4X4

LEVELING KITS

PART# 5307-GM
2.5" FRONT LEVELING SPACERS
2015+ COLORADO/CANYON 2WD/4WD



2	ALUMINUM COIL SPACER
2	SPACER PLATE

PLEASE DOUBLE CHECK THE PARTS LIST BEFORE BEGINNING INSTALLATION, TO ENSURE ALL PARTS ARE PRESENT, IF THERE IS SOMETHING MISSING, PLEASE CONTACT BODY ARMOR 4X4 IMMEDIATELY

(866) 894-3351 USA AND (877)326-0933 CANADA



READ THE INSTRUCTIONS THOROUGHLY AND COMPLETELY BEFORE BEGINNING THE INSTALLATION.

STEP 1: Jack up the front of the truck and support under the frame rails with jack stands.


STEP 2: Unbolt the tie rod from the spindle and separate.

STEP 3: Unbolt the sway bar end link, pull out the bolt and remove the link.


STEP 4: unbolt the sway bar from the frame, rotate so that it is not resting on the lower control arm, and allow it to rest on the skid plate.

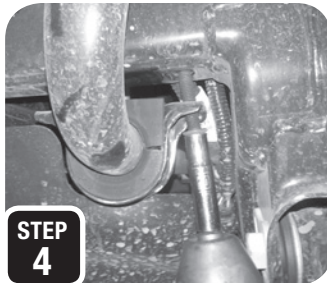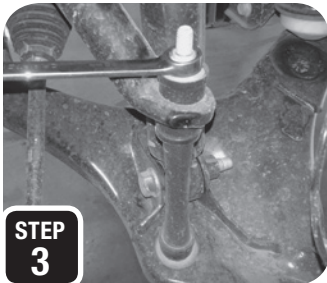

STEP 5: Unbolt all three nuts at the top of the strut and the 1 bolt at the bottom, then remove the strut.

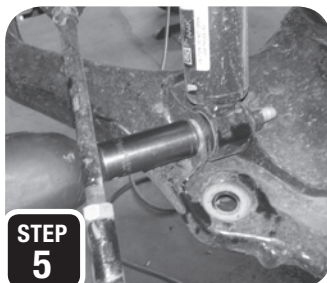

STEP 6: Compress the coil and remove the strut top. Separate the rubber coil isolator from the strut top and install the aluminum coil spacer in between the two. The coil will need to be compressed a little further to make room for the spacer, then re-assemble the strut, tighten the nut and remove the compressor. **STEP 7:** Place the ¼" spacer plate on top of the strut then re-install the strut assembly back into the truck.

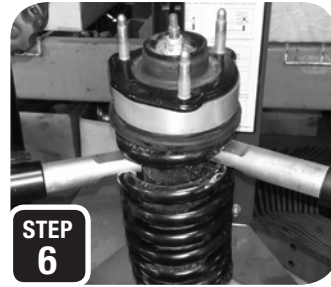

STEP 8: Reverse the installations instructions for re-assembly.

