



Body Armor 4x4 by Tolar Mfg.
1932 Elise Circle, Corona CA 92879
Ph: 951-808-0750

Customer service hours:
7 AM to 4:30pm M-TH 8AM-12PM F
www.bodyarmor4x4.com



Installation instructions for Toyota FJ rear bumper; PN FJ-2961

- ** Inspect bumper and all parts prior to installation. Contact us at 951-808-0750 for missing parts.**
- ** If there is any freight damage, contact the company where you purchased the product. They will be able to process a freight claim or direct you to us if your order was shipped directly from Body Armor.**

Hardware list:

	FJ-2961
QTY 8	M12X1.75X40mm
QTY 8	M12X1.75 nut
QTY 26	M12 Washer
QTY 10	M12X1.25X65mm

Removing Factory bumper:

- 1 Remove rear bumper fascia from vehicle.
- 2 Unplug and remove back-up sensors if equipped and save for installation.



- 3 Remove Styrofoam center piece.

Bumper Installation for FJ-2961:

We recommend you have help with lifting of the rear bumper to avoid injury or damage to bumper and vehicle.

- 1 Cut plastic corner pieces from rear fascia as shown in pictures.




- 2 Reinstall cut corner pieces with factory hardware.
- 3 Re- install the back-up sensors. Prior to placing the bumper on the vehicle.

- 4 Bolt corner pieces to center section with supplied hardware. Place the bumper on the vehicle; be sure to have all of the tabs on the back of the FJ under the bumper. If any are on top they will damage the paint



- 5 Using M12x1.75x40mm bolts, washers and nuts loosely attach D-ring plate to bumper and bumper to vehicle.

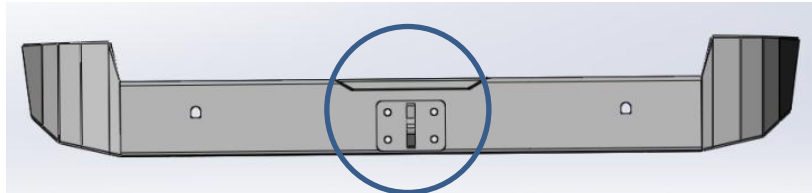

- 6 Install four bolts through bottom of bumper into frame Spacers may be required if you are not installing or do not have an aftermarket hitch. If your vehicle is equipped with an aftermarket hitch you will not need to use spacers.



- 7 Check alignment to body and tighten all hardware. Start with the bolts under the frame, tighten the center bolts last.

Note: Recheck all hardware after the first couple hundred miles. It is advised to inspect the bumper and hardware periodically.

Do not return this product to the dealer if there is a question or concern about a possible defect, contact us directly and we will make every effort to resolve the issue as quickly as possible. 1-951-808-0750 or kneubauer@tolarmfg.com

**** Body Armor warranty policy: Body Armor 4x4 warrants this product to be free from manufacturer defects for the life of the product. Damage to the product is not considered a defect; abuse of the product is not considered a defect. If fitment issues occur during the installation is not considered to be a defect, call our office to resolve fitment or installation questions. 951-808-0750. Body Armor 4x4 warranty's the paint for 90 days from date of purchase. Rust is not a warrantable defect as we cannot control proper maintenance of the product or environmental variables. We use the highest quality powder coat process as well as an E-Coat undercoating, this allows for the maximum corrosion resistance available. Proper maintenance is required to maintain the long term luster of the paint. Touch rock chips with a quality flat black spray paint or automotive touch up paint.**