

GM UNDERRAIL BEDLINER/TAILGATE COVER INSTALLATION INSTRUCTIONS

1. Installation Preparation

PLEASE READ ENTIRE INSTALLATION INSTRUCTION SHEET BEFORE BEGINNING INSTALLATION. Improper installation may void warranty.

WARNING: Do not transport a pick up truck facing backward with a liner installed. Air can get under the liner which may result in the liner coming out of the truck and causing damage or injury.

Truck Box Preparation:

Clean truck box of all foreign matter and open any floor drains to ensure ventilation and moisture drainage.


Tools Required:

#20 Torx driver, Electric Drill, Phillips Driver, Center Punch.

Note:

Bedliner can be installed by one person. However, using two people is recommended by the manufacturer.

2. Tailgate Cover Installation Steps

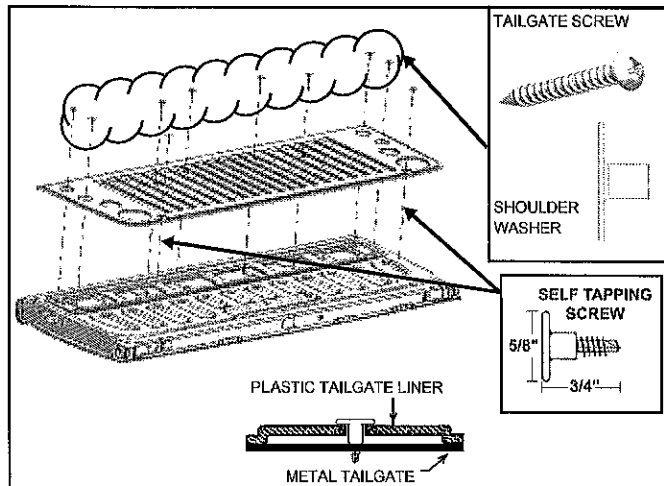

STEP 1

Remove 8 existing factory installed screws from tailgate latch plate and discard.

STEP 2

Center plastic tailgate cover on truck tailgate. Insert and tighten tailgate fastener screws with shoulder washers provided in hardware kit in the holes of tailgate.


STEP 3

Using a center punch carefully mark the screw location in the center of a precut slot. Position self-drilling screw at the marked location. Fasten the screw to the tailgate with a power screwdriver. **DO NOT OVER TIGHTEN BECAUSE THE SCREW THREADS CAN BE STRIPPED EASILY.**

STEP 4


Repeat step 3 in the remaining slot location.

3. Bedliner Installation Steps

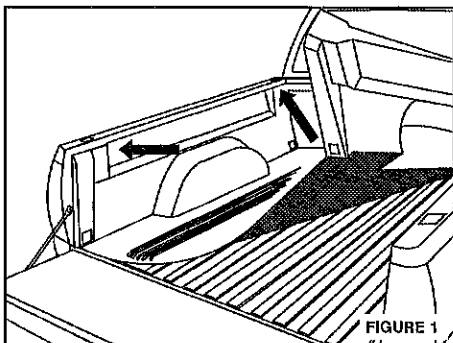

STEP 1

Place bedliner in truck box. While standing beside truck at approximately the center of box area, lift side of bedliner up at a 45 degree angle so that the opposite side slips under the siderail of pickup truck (see Figure 1). A second person may be required to help slip the wall of the bedliner under the sidewall of the truck box.

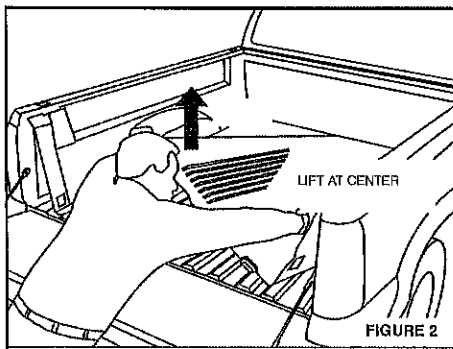

STEP 2


Stand at the rear of pickup (center) and lift the center of bedliner floor up. Have a second person push bedliner wall under siderail of the pickup truck (see Figure 2). Release bedliner floor. (Make sure front rail of bedliner is completely over the front rail of truck box.)

Manufactured by:

PENDA CORPORATION • P.O. Box 449, 2344 W. Wisconsin St., Portage, WI 53901-0449
(800) 356-7704 • (800) 362-7611 (In Wisconsin) • (Internet) www.pendacorp.com

590104 Rev D 04/12/2013

1 of 4

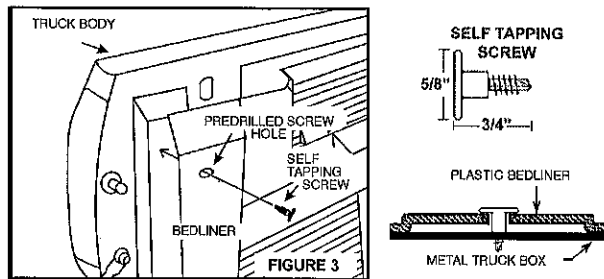

STEP 3


Press the bedliner firmly against the truck body. Center a self tapping screw in a pre-drilled hole in the bedliner. Fasten the screw to the truck box wall with a power screwdriver (See Figure 3). **DO NOT OVER TIGHTEN BECAUSE THE SCREW THREADS CAN BE STRIPPED EASILY.**

STEP 4

Repeat Step 3 to remaining hole location on opposite side.

OPTIONAL GUIDANCE

Bedliners have scribe marks on the truck-side for optional features that have not been pre-cut. If any of the areas indicated (See figure 4) have not been pre-cut and the truck bed has the indicated option these areas will need to be cut along the scribe marks. The recommended hole size for sidewall tie-downs is 2".

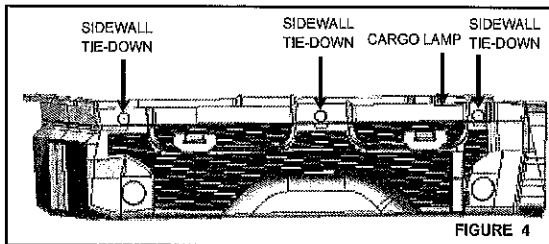

PROTECTOR DE CAJON BAJO PERFIL / INSTRUCCIONES DE INSTALACION PARA PROTECTOR DE CAJON Y COMPUERTA GM

1. En preparación para la instalación:

FAVOR LEA POR COMPLETO LA HOJA DE INSTRUCCIONES ANTES DE COMENZAR LA INSTALACION. Una instalación inadecuada podría anular la garantía del producto.

PRECAUCION: Manejar su camioneta en reversa con un protector instalado podría causar que el aire se cuele por debajo del mismo levantando el protector sacándolo de la camioneta y causando daños.

Preparación del área de carga:

Limpie el cajón metálico de la camioneta asegurándose de abrir cualquier orificio de drenaje en el piso para asegurar la ventilación y drenaje de líquidos.


Herramientas necesarias:

Destornillador punta de estrella #20, Taladro eléctrico, punzón.

Nota:

El protector puede ser instalado por una persona, sin embargo, el fabricante recomienda sea instalado por dos personas.

2. Pasos para instalación de compuerta

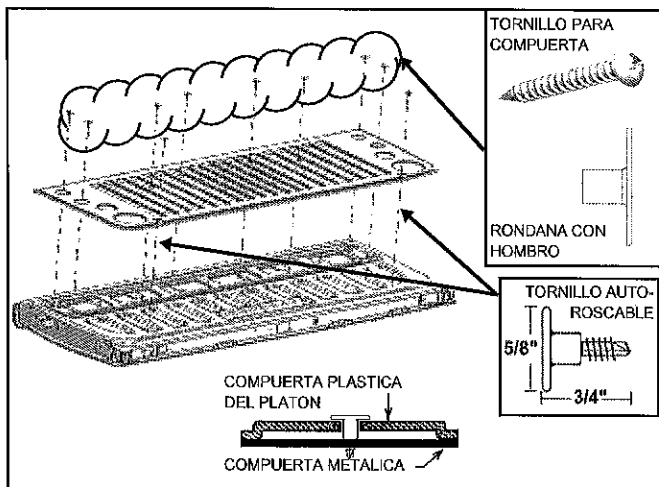

PASO 1

Retire y deseche los 8 tornillos originales de la compuerta metálica.

PASO 2

Centre la compuerta plástica del protector sobre la compuerta metálica. Introduzca los tornillos y arandelas provistos con el kit de instalación en los orificios de la compuerta plástica.

PASO 3

Utilizando un punzón marque cuidadosamente la ubicación de los tornillos autorroscantes y apriételos. **NO APRIETE EN EXCESO EL TORNILLO YA QUE PUEDE AMELLARSE FACILMENTE**

PASO 4

Repita el paso anterior en cada uno de los hoyos de la compuerta plástica.