



## 3" W2W Nerf Bar

Part No. 3012142001/3

Fits: 2000 - 2013

Chevrolet Silverado 1500/2500LD, Ext.Cab,4 door, Short Bed 6.6'

2001 - 2014


Chevrolet Silverado 2500HD/3500, Ext. Cab,4door,Short Bed 6.6'

2000 - 2013

GMC Sierra 1500/2500LD,Ext. Cab, 4 door, Short Bed 6.6'

2001 - 2014

GMC Sierra 2500HD/3500,Ext. Cab, 4door,Short Bed 6.6'

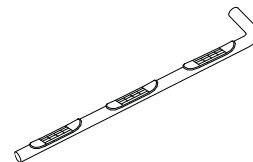

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT.




READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.



DO NOT OVER TORQUE. STANDARD OPERATING LOAD FOR TIGHTEN BODY MOUNT NUTS & BOLTS VARIES FROM 45 TO 65 FOOT POUND.



30-60 min



Cutting Not  
Required



Drilling Not  
Required



support@trailfx.com



1 866 638 4870



POLISHED STAINLESS STEEL – LIMITED LIFETIME  
POWDER COATED BLACK – 3 YEARS

### PARTS LIST:

Qty	Part Description	Qty	Part Description
1 Set	Rear Bracket	4	M10x35mm Bolts
1 Set	Front Bracket	12	M10 Flat Washer
1 Set	Front Bracket	4	M10 Lock Washer
2	1/2"x2.5" Hex Head Bolts	4	M10 Hex Nuts
2	1/2" Flat Washer	2	M12 Square Plate
2	1/2" Lock Washer	4	M10 Internal Tooth Lock Washer
4	M10x35mm Hex Bolts		











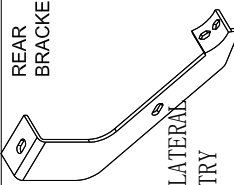

DRIVER (LEFT) FRONT	DRIVER (LEFT) REAR	PASSENGER (RIGHT) REAR	PASSENGER (RIGHT) FRONT	REAR SUPPORT BRACKET


### INSTALLATION PROCEDURE

1. A magnetic pick up tool is recommended to assist with the installation.
2. Remove the end caps on the side bars before beginning installation.
3. Locate the correct Side Bar and set of Brackets referenced to the illustration. (See Illustration 1).
4. (Bracket Installation) Locate the existing bolts on the correct body mounts of the chassis. Remove them and install the brackets as shown (See Illustration1). You will need to tap out the existing body mount bolt from the bushing using a hammer. (See Illustration1). The body mount bolt will also need to be tapped back in when installing the mounting brackets. Install only hand tight at this point.
5. (Side Bar Installation) Hold the side bar up to the brackets and install using the 1/2"x2.5" Hex Head Bolts with the 1/2" Flat and Lock Washers. (See Illustration1)
6. Tighten the body mount bolts. Then align the Side Bar and tighten the Side Bar bolts.
7. Recheck bolts periodically.

# Installation Instructions

PSS Part # 3012142001  
BLK Part # 3012142003

 2pcs-LATERAL SYMMETRY		 2pcs	
 1/2" x 2.5" MM HEX BOLT	2pcs	 M10x35MM HEX BOLT	4pcs
 1/2" FLAT WASHER	2pcs	 M10 FLAT WASHER	4pcs
 M10 LOCK WASHER	4pcs	 M10 Internal Tooth Lock Washer	12pcs
 M10 HEX NUT	4pcs	 M12 SQUARE PLATE	2pcs
 M10x35MM ALLEN HEAD BOLT	4pcs	 1/2" LOCK WASHER	2pcs

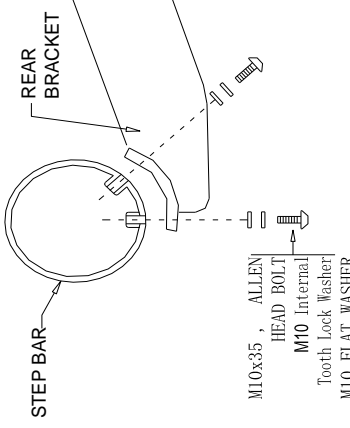

STEP BAR

REAR BRACKET

M10x35 , ALLEN HEAD BOLT

M10 Internal Tooth Lock Washer

M10 FLAT WASHER

FIGURE 3  
REAR MOUNT ATTACHMENT

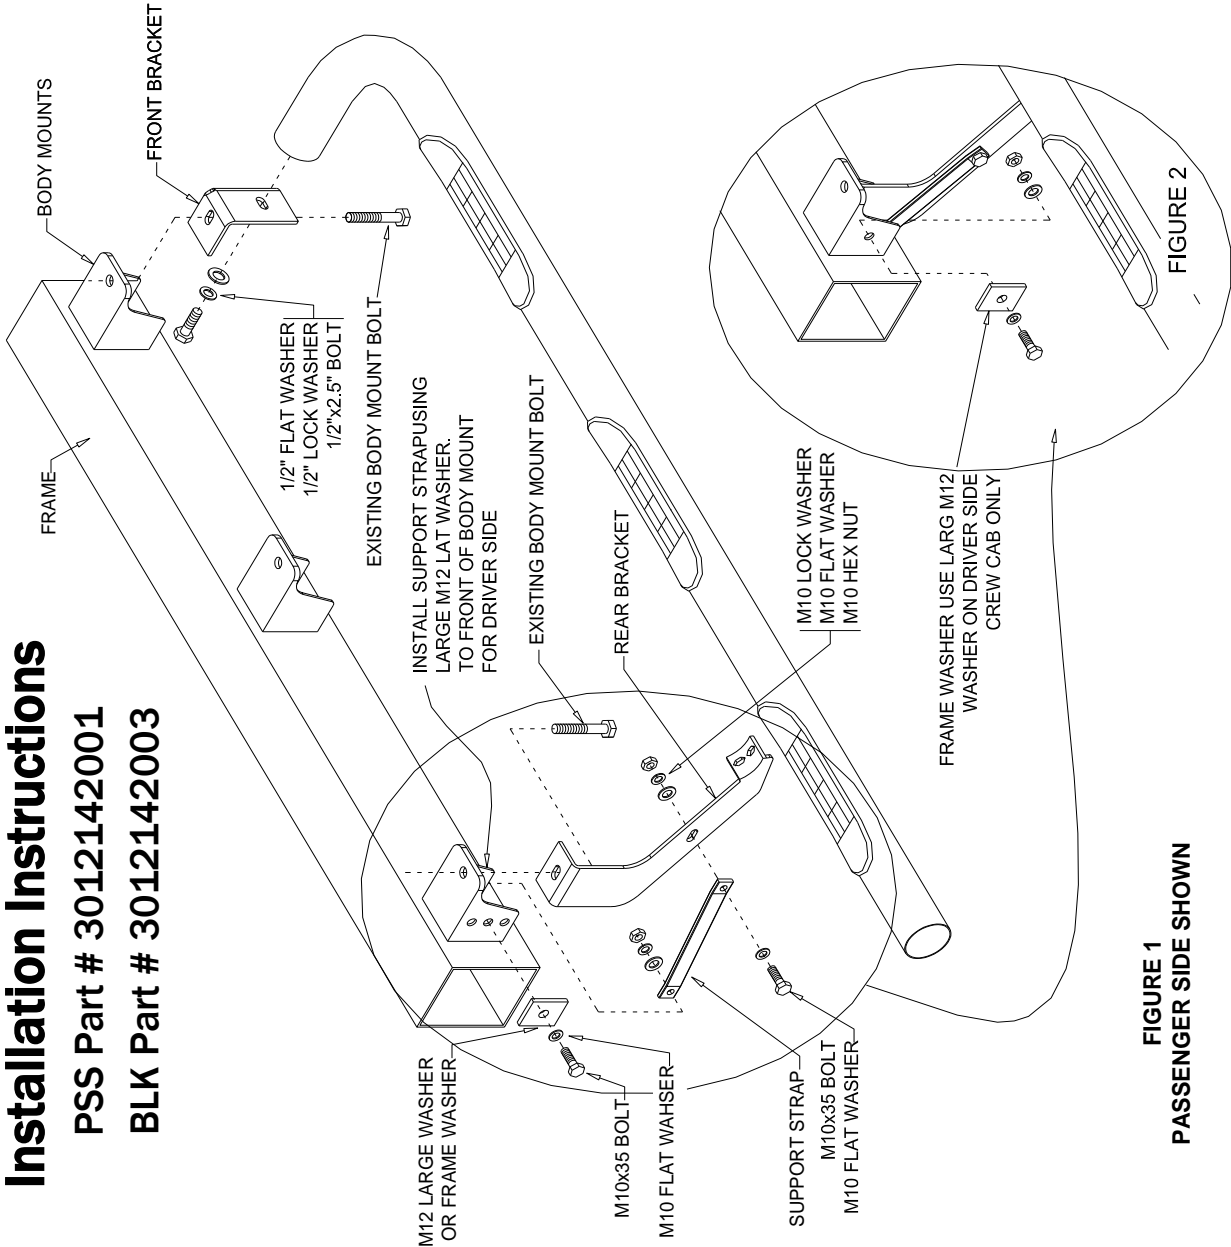


FIGURE 1  
PASSENGER SIDE SHOWN


## PARTS IDENTIFICATION GUIDE

**Driver Side tube taped in "Red" Color. Passenger Side tube taped in "Blue" Color.**

No.	Parts Identification
1	Passenger / Right 'Rear' Bracket marked "RR"
2	Driver / Left 'Rear' Bracket marked "RL"
3	Passenger / Right 'Center' Bracket marked "CR"
4	Driver / Left 'Center' Bracket marked "CL"
5	Passenger / Right 'Front' Bracket marked "FR"
6	Driver / Left 'Front' Bracket marked "FL"
7	'Left' marked "L"
8	'Right' marked "R"

### Note:

- This guide is to identify the parts and not a reference for part count.
- Product / Bracket image is for representative purpose only.
- Actual design may vary based on application.
- Refer Parts List for Hardware.

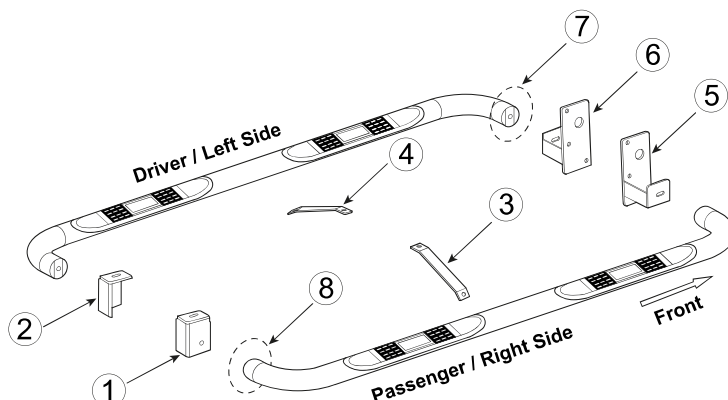

## PRODUCT CARE

- Periodically check the product to ensure all fasteners are tight and components are intact.
- Regular waxing is recommended to protect the finish of the product.
- **Use ONLY Non-Abrasive automotive wax.** Use of any soap, polish or wax that contains an abrasive is detrimental and can scratch the finish leading to corrosion.
- Aluminum polish may be used to polish small scratches and scuffs for **Stainless Steel finish.**
- Mild soap may be used to clean the product for both **Stainless Steel and Black finish.**

## FAQ's

### 1. Hardware's are not of correct size.

*In GMC / Chevrolet truck model 2006 & up, customer needs to reuse the factory body bolts to install the bracket. If your vehicle is not GMC / Chevrolet 2006 & up, ensure that holes are not partially covered with any plastic grommet or rust? If it is, remove the plastic grommet & rust from the thread holes & re-try the installation.*

### 2. Mounting Bracket are not getting Installed properly.

*In some cases Illustration images shown in Installation manual may not be the exactly same as per actual vehicle images ,also if Driver / Passenger side mounting brackets are very identical in the design, suggest referring Parts Identification guide to avoid fitment issue.*

### 3. Products are thumping / rattling after installation.

*Ensure that all required mounting brackets / hardware's are installed & tighten correctly. Suggest using white lithium / regular grease between the metal to metal contact surfaces.*

### 4. Side Bar is not aligning with vehicle / Step Pads are not aligning with vehicle doors.

*Side bar may be interchanged or mounting brackets are not installed at the correct position in the vehicle. Refer Parts identification guide.*

### 5. Missing / Excess Hardware.

*Recheck hardware count as per the part list.*

### 6. Product not installing properly.

*Ensure make model year, cab length and bed size of your vehicle is listed in the application. All installation steps are followed correctly.*

Check out these other TrailFX Products!!

www.TrailFX.com



**BULL BARS**



**GRILLE GUARDS**



**BED RAILS**



**RUNNING BOARDS**

Keystone Automotive Operations Inc. (KAO) warrants this product to be free of defects in material and workmanship at the time of purchase by the original retail consumer. KAO disclaims any other warranties, express or implied, including the warranty of fitness for a particular purpose or an intended use. If the product is found to be defective, KAO may replace or repair the product at our option, when the product is returned prepaid, with proof of purchase. Alteration to, improper installation, or misuse of this product voids the warranty. KAO's liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for any incidental or consequential loss or damage.