



# A4 ALUMINIUM STEP BAR

Part No. AL4008B



**Fits: 2019-2020 DODGE RAM 1500 QUAD CAB**




EXCLUDES 2019-2020 RAM 1500 CLASSIC



REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT.



READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.



DO NOT OVER TORQUE. STANDARD OPERATING LOAD FOR TIGHTENING BODY MOUNT NUTS & BOLTS VARIES FROM 18 TO 20 FOOT POUND FOR M8 HARDWARE.



120 mins



Cutting Not  
Required



Drilling Not  
Required



support@trailfx.com




1- (866) 638 - 4870



POWDER COATED BLACK - LIMITED LIFETIME

## PARTS LIST:

Qty	Part Description	Qty	Part Description
1	Driver/Left A4 Step Bars	12	8mm x 20mm T-Bolts
1	Passenger/Right A4 Step Bars	30	8mm x 24mm OD x 2mm Flat Washers
6	Mounting Brackets	12	8mm Lock Washers
6	Plastic Covers	12	8mm Hex Nuts
12	Plastic Clips	18	8mm Nylon Lock Nuts
<b>REPLACEMENT PARTS LIST (NOT INCLUDED IN BOX)</b>			
1	Step Pad Pack (Includes clips) - G9029	1	End Caps Pack - G9030
1	Bracket Cover Pack - G9031		

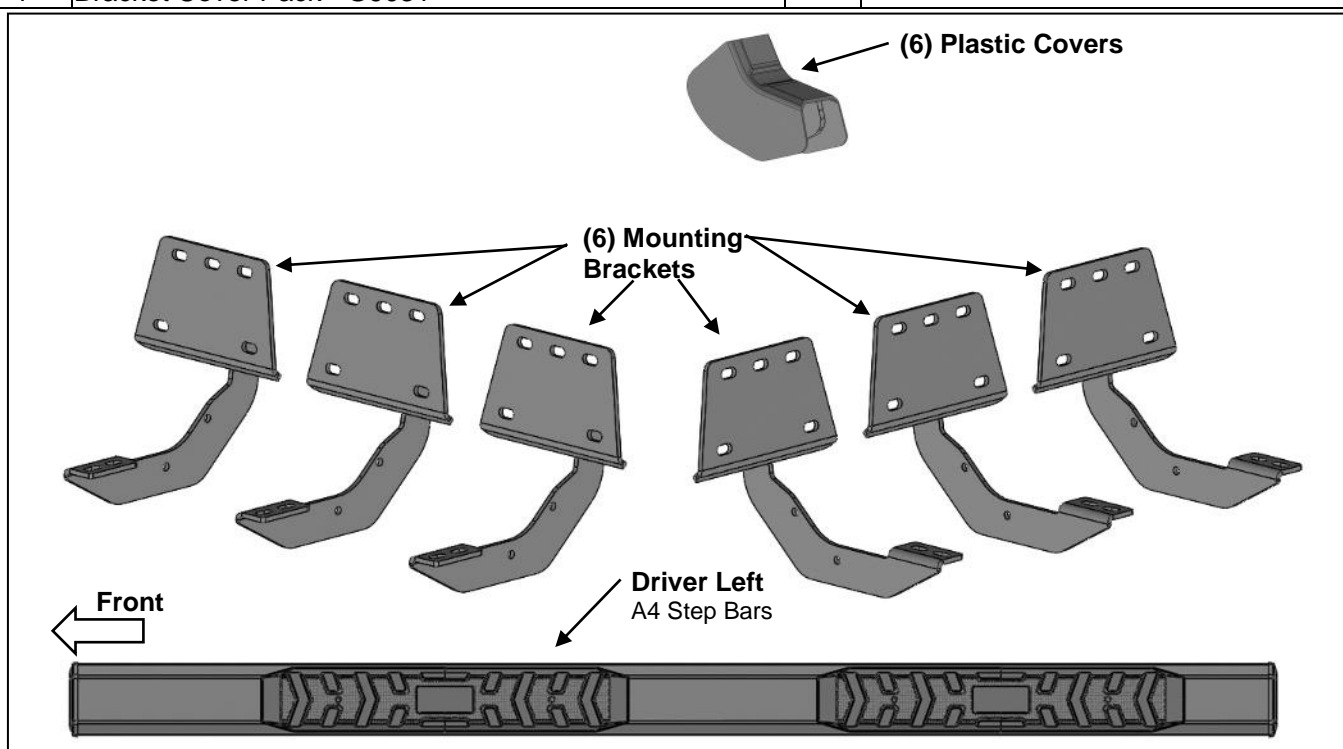


## PROCEDURE:

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. ASSISTANCE IS RECOMMENDED.

1. Start the installation under the Driver/Left side of the vehicle. Locate the front (3) factory studs along the inner side of the body panel, **(Figure 1)**. **NOTE:** Clean threads on the studs first before installing Brackets to remove paint buildup.
2. Select (1) Mounting Bracket. Attach the Mounting Bracket to the (3) factory studs with (3) 8mm Flat Washers and (3) 8mm Nylon Lock Nuts, **(Figure 2)**. Do not tighten hardware.
3. Select (1) Plastic Cover. Attach the Cover to the Mounting Bracket with (2) Plastic Clips, **(Figure 3)**.
4. Repeat **Steps 1—3** to attach (2) Mounting Brackets to the center and rear mounting locations along the body panel, **(Figures 4 & 5)**.
5. Select the Driver/Left A4 Step Bars. Insert (6) T-Bolts into the channels in the bottom of the Sidebar, (3) per channel, **(Figure 6)**. Attach the Sidebar to the Mounting Brackets with (6) 8mm Flat Washers, (6) 8mm Lock Washers and (6) 8mm Hex Nuts, **(Figure 7)**. Do not tighten hardware.
6. Level and adjust the Sidebar as necessary and fully tighten all hardware.
7. Repeat **Steps 1—6** to attach the Passenger/Right A4 Step Bars.
8. Do periodic inspections to the installation to make sure that all hardware is secure and tight.


**To protect your investment,** Do not use any type of polish or wax that may contain abrasives that could damage the finish. Mild soap may be used also to clean the Sidebars.

### Driver/Left Side Installation Pictured

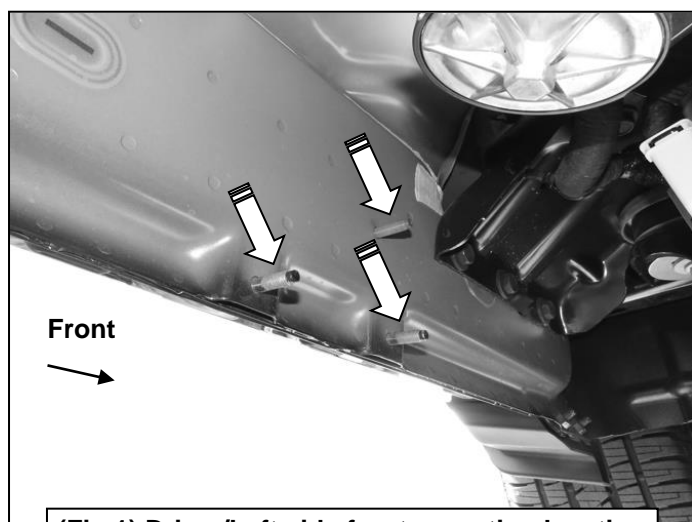


**(Fig 1) Driver/Left side front mounting location**

**(3) 8mm Flat Washers  
(3) 8mm Nylon Lock Nuts**

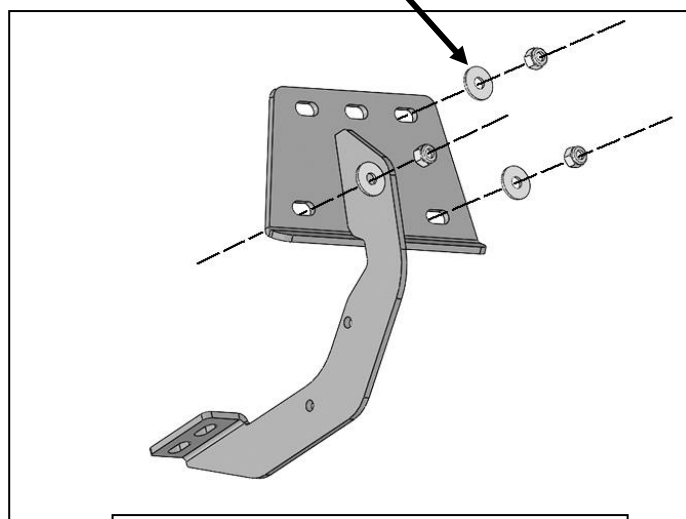

**(Fig 2) Attach Bracket to the (3) studs**

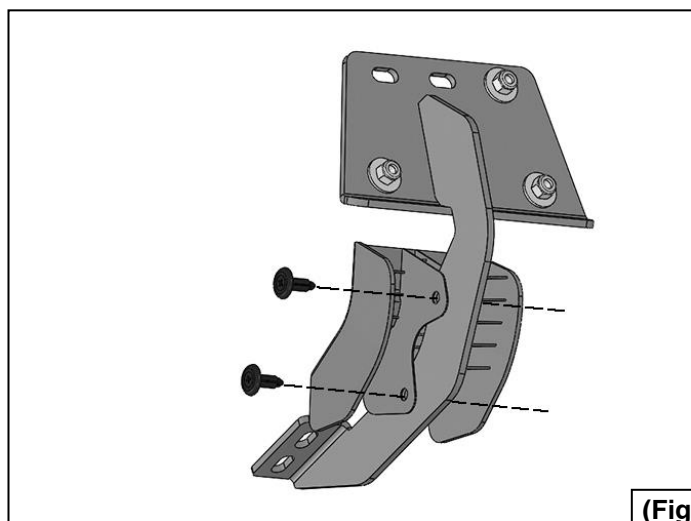


**(Fig 3) Attach (1) Plastic Cover to the Mounting Bracket with (2) Plastic Clips**

# Driver/Left Side Installation Pictured




Front  
→

(Fig 4) Driver/Left side center mounting location

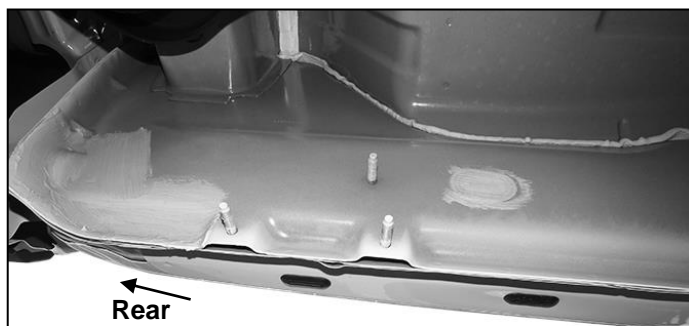


←  
Rear

(Fig 5) Driver/Left side rear mounting location

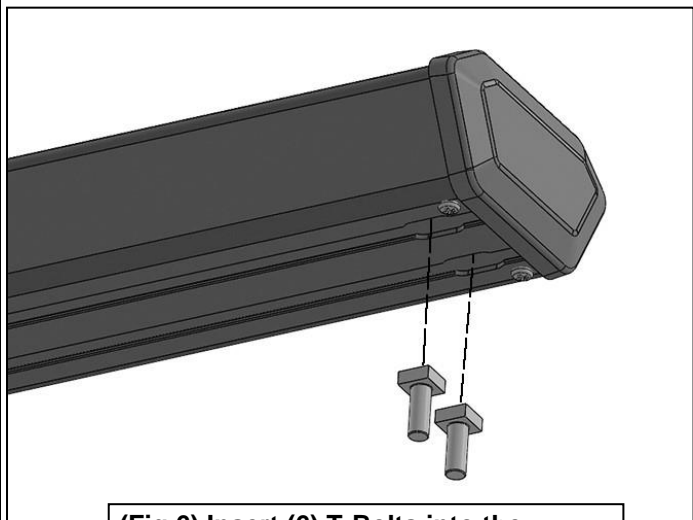

(Fig 6) Insert (6) T-Bolts into the bottom of the Sidebar, (3) per channel

- (2) 8mm Flat Washers
- (2) 8mm Lock Washers
- (2) 8mm Hex Nuts

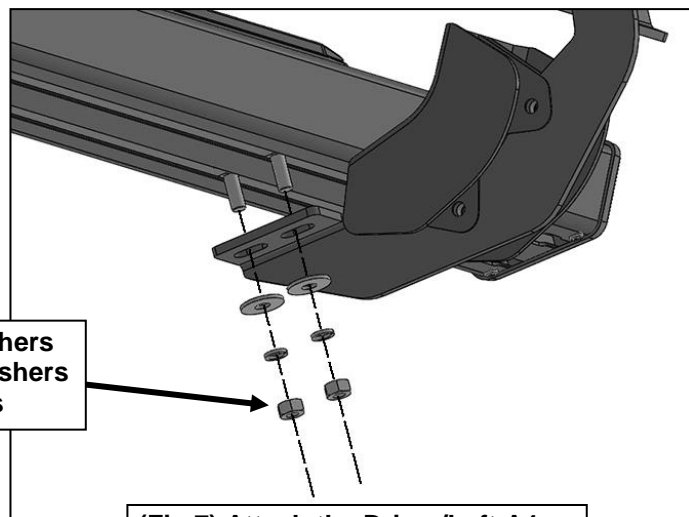

(Fig 7) Attach the Driver/Left A4 Step Bars to the Mounting

**PRODUCT CARE**

- Periodically check the product to ensure all fasteners are tight and components are intact.
- For cleaning, use mild soap and warm water with a soft cloth or brush to prevent scratching.

**FAQ's****1. Hardware and mounting brackets are not aligning properly**

*Ensure that hardware is being used on the correct side of the vehicle. In some cases, the hardware may appear same for driver or passenger side but may alter the alignment of mounting location. Check mounting brackets for both sides.*

**2. Step Bar is not aligning with vehicle / doors**

*Step bars may be interchanged or reversed (Driver / Passenger Side). Check step bar for each side as well ensure the proper hardware has been used for each side.*

**3. Products are thumping / rattling after installation.**

*Ensure that all required mounting brackets / hardware's are installed & tighten correctly. Suggest using white lithium / regular grease between metal to metal contact.*

**4. Missing / Excess Hardware.**

*Recheck hardware count as per the part list.*

**5. Product not installing properly.**

*Ensure the Year / Make / Model as well as cab and bed dimensions are correct for the application. Review all steps for installation to ensure they were followed correctly.*

**6. Who should be contacted for questions regarding product / installation assistance?**


*www.trailfx.com / support@trailfx.com 1-(866) 638-4870*

**Check out these other TrailFX Products!**

**www.trailfx.com**



**HOOD PROTECTOR**

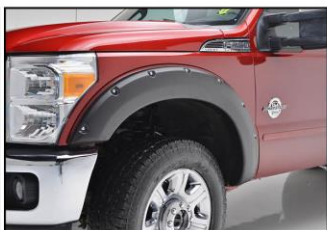

**FENDER FLARES**



**TONNEAU COVER**



**BED LINERS**

Keystone Automotive Operations Inc. (KAO) warrants this product to be free of defects in material and workmanship at the time of purchase by the original retail consumer. KAO disclaims any other warranties, express or implied, including the warranty of fitness for a particular purpose or an intended use. If the product is found to be defective, KAO may replace or repair the product at our option, when the product is returned prepaid, with proof of purchase. Alteration to, improper installation, or misuse of this product voids the warranty. KAO's liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for any incidental or consequential loss or damage.