



INSTALLATION INSTRUCTIONS

VxSPEC UPGRADE

VEHICLE SPECIFIC LIGHTING

'19+ FORD RANGER FOG LIGHT KIT



Included in Ford Ranger Fog Light Kit

1

3.0" CG2
Mini Cannon




Light

Qty: 2

2

H11
Adaptors




Wiring

Qty: 1

3

Brackets

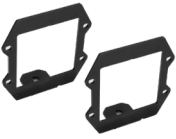

Mounting

Qty: 2

FORD RANGER FOG LIGHT KIT SPECIFICATIONS

- | | |
|------------------|-----------------------|
| 1. Warranty | : Extended |
| 2. Amp Draw | : 3.5A @ 12V DC (Kit) |
| 3. Input Voltage | : 9-32V DC |
| 4. Beam Patterns | : 10° Broad Spot |
| 5. LED Lifespan | : 50,000 Hours |

MOUNTING INSTRUCTIONS

*Removing the wheel can make the installation easier, follow factory guidelines for wheel removal.

1. Remove plastic cover by removing 2 plastic push pins. (Figure 1.)

Figure 1.



FORD RANGER FOG LIGHT KIT

2. Move rubber trim between body and bumper (Figure 2) to expose the plastic push pin (Figure 3).

Figure 2.



Figure 3.



3. Remove plastic push pin on inner fender liner. Pull fender liner back out of the way. (Figure 4)

Figure 4.



4. Remove outer splash guard bolt (10mm). (Figure 5)

Figure 5.



5. Remove lower outer splash guard bracket bolt (12mm). (Figure 6)

Figure 6.



6. Pull splash guard back to expose the metal bracket holding the splash guard. (Figure 7)

Figure 7.



FORD RANGER FOG LIGHT KIT

7. Remove upper splash guard bracket bolt (12mm) and carefully remove the splash guard and bracket. (Figure 8)


Figure 8.



8. Unplug wiring into factory fog light.

9. Remove the 4 Torx screws (T25) securing the factory fog light. (Figure 9).

Figure 9.

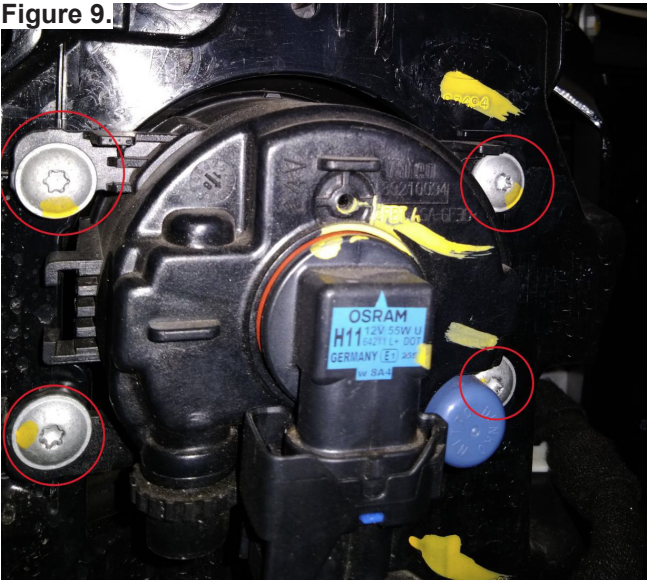

10. Trim off outer lower plastic tang on the fog light housing. (Figure 10)


Figure 10.



11. Install new fog light bracket with the light tab facing up using original Torx hardware (T25).

12. Install light into brackets using a 13mm wrench. (Figure 11)

Figure 11.

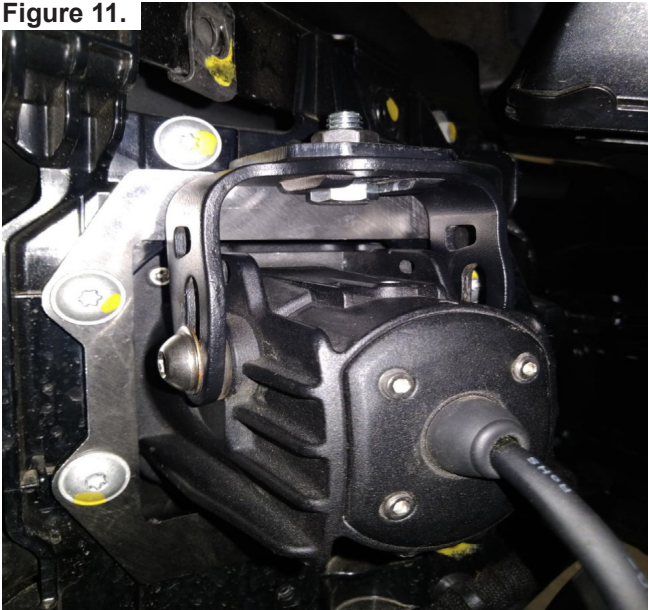

FORD RANGER FOG LIGHT KIT

13. Using the included adaptors, connect the lights to the factory fog light harness.
14. Power on the lights and adjust the beam angle if necessary by loosening the (2) side allen head bolts.
15. Install the factory splash guard and bracket, then the inner fender liner and plastic cover.





LIGHTING EVOLVED

"Innovating to provide the world's most
advanced lighting systems"



LEARN MORE | CONTACT US
VISIONXLIGHTING.COM | INFO@VISIONXUSA.COM