



INSTALLATION INSTRUCTIONS

WINCH MOUNT KIT

Part Number: 111775

Application: 2025 CF Moto Uforce U10

GENERAL SAFETY PRECAUTIONS

Your safety, and the safety of others, is very important. To help you make informed decisions about safety, we have provided installation and operating instructions and other information on labels and in this guide. This information alerts you to potential hazards that could hurt you or others. It is not possible to warn you about all potential hazards associated with this product, you must use your own good judgment.

CARELESS INSTALLATION AND OPERATION CAN RESULT IN SERIOUS INJURY OR EQUIPMENT DAMAGE. READ AND UNDERSTAND ALL SAFETY PRECAUTIONS AND OPERATING INSTRUCTIONS BEFORE INSTALLING AND OPERATING THIS PRODUCT.

This guide identifies potential hazards and has important safety messages that help you and others avoid personal injury or death. WARNING and CAUTION are signal words that identify the level of hazard. These signal words mean:

⚠WARNING signals a hazard that could cause serious injury or death, if you do not follow recommendations. **⚠CAUTION** signals a hazard that may cause minor to moderate injury, if you do not follow recommendations.

This guide uses **NOTICE** to call attention to important mechanical information, and Note: to emphasize general information worthy of special attention.

⚠ WARNING

IMPACT AND MOVING PARTS ENTANGLEMENT HAZARD

Failure to observe these instructions could lead to severe injury or death

- **Always** take time to fully read the Instructions and/or Operations Guide, and/or Basic Guide to Winching Techniques, in order to understand your winch and its operations.
- **Always** use extreme caution when drilling on any vehicle. Make sure that all fuel lines, brake lines, electrical wires, and other objects are not punctured or damaged when/if drilling on the vehicle. Thoroughly inspect the area to be drilled (on both sides of material) prior to drilling, and relocate any objects that may be damaged. Failure to inspect the area to be drilled may result in vehicle damage, electrical shock, fire or personal injury.
- **Always** wear safety glasses when installing this kit. A drilling operation will cause flying metal chips. Flying chips can cause eye injury.
- **Always** use extreme caution when cutting and trimming during fitting.
- **Always** remove jewelry and wear eye protection.
- **Never** lean over battery while making connections.
- **Never** route electrical cables:
 - o Across any sharp edges.
 - o Through or near moving parts.
 - o Near parts that become hot.
- **Always** insulate and protect all exposed wiring and electrical terminals.
- **Always** install terminal boots as directed in installation instructions.
- **Always** use appropriate and adequate care in lifting components into place.
- **Always** insure components will remain secure during installation and operation.
- **Always** tighten all nuts and bolts securely, per the installation instructions.
- **Always** perform regular inspections and maintenance on the plow mechanism, fasteners, cable and related hardware.
- **Always** replace all worn or damaged parts before operating.
- **Never** operate this WARN product with damaged or missing parts.

Read installation and operating instructions thoroughly.

⚠ CAUTION

MOVING PARTS ENTANGLEMENT HAZARD

Failure to observe these instructions could lead to minor or moderate injury

- **Always** take time to fully read and understand the installation and Operations Guide included with this product.
- **Never** operate this product if you are under 16 years of age.
- **Never** operate this product when under the influence of drugs, alcohol or medications.

Read installation and operating instructions thoroughly.

NOTICE

EQUIPMENT DAMAGE

- **Always** refer to the Installation and Specification Guide, supplied in the winch kit, for all wiring schematics and specific details on how to wire this WARN product to your vehicle.
- **Never** overtighten u-bolt nuts. Overtightening may cause damage to vehicle frame.

Read installation and operating instructions thoroughly.

NOTES

If you decide not to use the OE fairlead, you will need to purchase a short drum Warn fairlead (sold separately). The standard-length fairlead supplied in your WARN winch kit will not mount to the OE fairlead mounting holes.

BEFORE YOU BEGIN

1. Park the vehicle on level ground, set the parking brake, turn off the ignition switch.
2. Disconnect the battery.

TABLE OF CONTENTS


Tools Required.....	page 2
Parts List.....	page 3
Torque Specifications.....	page 3
Installation.....	page 3-6
Maintenance/Care.....	page 6

TOOLS REQUIRED

- Standard and Metric Wrenches
- Standard and Metric Sockets

PARTS LIST

Item	Qty	Name	PN	Item	Qty	Name	PN
A1	1	WINCH MOUNT BASE	111707	B1	4	M8-1.25 X 30MM FLAT HD SCREW	111774
				B2	4	M8-1.25 FLANGE LOCK NUT	71588

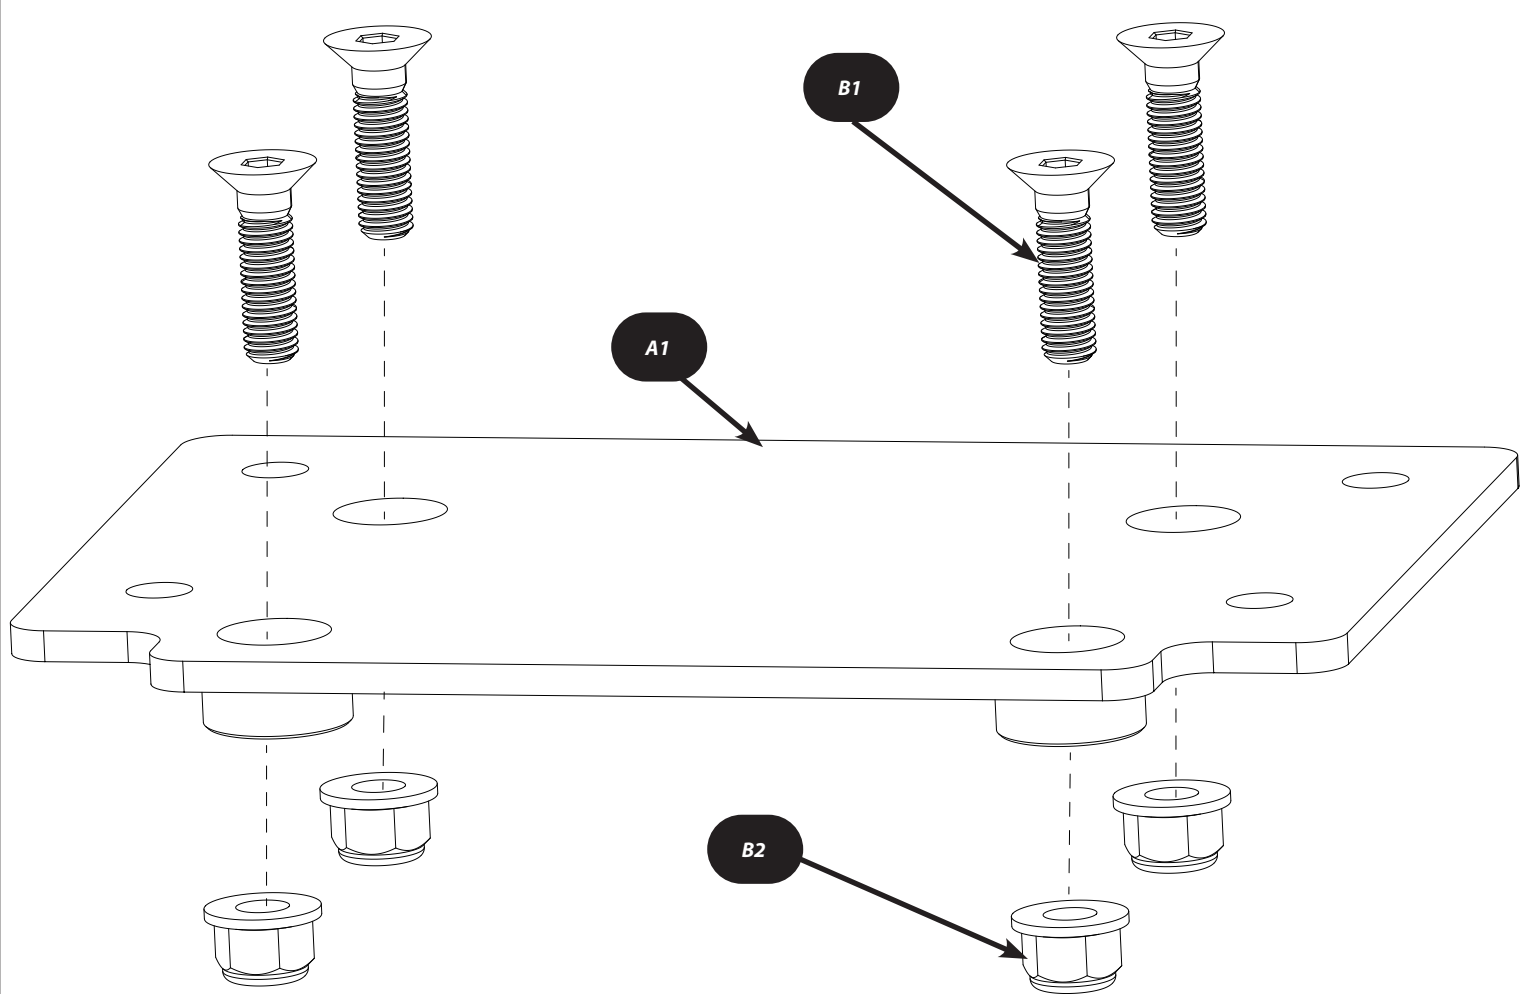

TORQUE SPECIFICATIONS

Please use the recommended torque specifications when assembling this product unless otherwise specified in the instructions.

FASTENER SIZE			FASTENER TORQUE		
	lb-ft	(N.m)		lb-ft	(N.m)
1/4"	8	(11)	M4	(2)	3
5/16"	17	(23)	M5	(4.5)	6
3/8"	30	(40)	M6	(7.5)	10
7/16"	48	(66)	M8	(18)	25
1/2"	74	(100)	M10	(37)	50
9/16"	106	(144)			
5/8"	148	(200)			
3/4"	269	(364)			


NOTICE: Torque does not apply to u-bolts.

INSTALLATION INSTRUCTIONS

1. Remove the center hood section by first pulling upward near the cab and popping the three clips, and then pull forward to release the two clips in the front grill.



2. Remove the four torx head screws from the plastic fenders (two on each side).

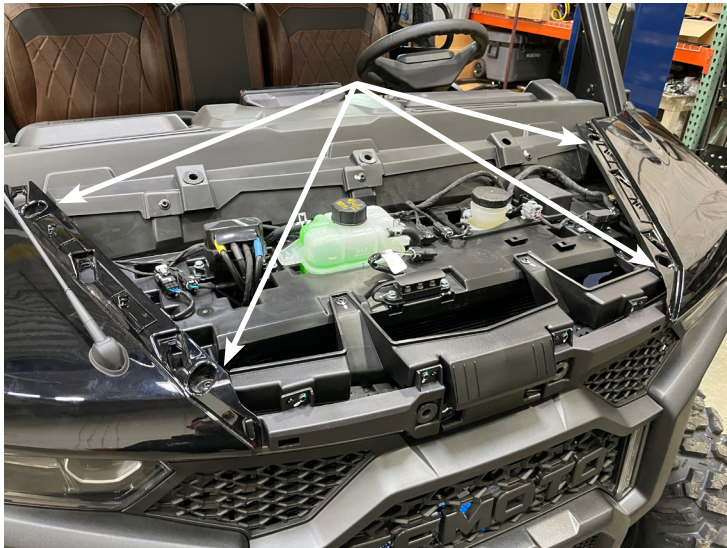

3. Using a body pry tool, remove the two push pull pins from the corner of the fender.
4. Remove the single torx head screw near the two push pull pins.
5. Repeat steps for other side of the vehicle.





6. Remove the corner fenders by first pulling the corner of the fender outward and then pushing/pulling the plastic fender towards the cab.
7. Repeat for other side.

NOTE: The passenger side will have the antenna harness connected. It is not necessary to disconnect the antenna. Just place the plastic fender loosely on top of the front of the vehicle.



8. Disconnect the light(s) and camera (if equipped) plugs.
9. Carefully use a body pry tool to remove the multiple clips holding the wiring harnesses to the grill.

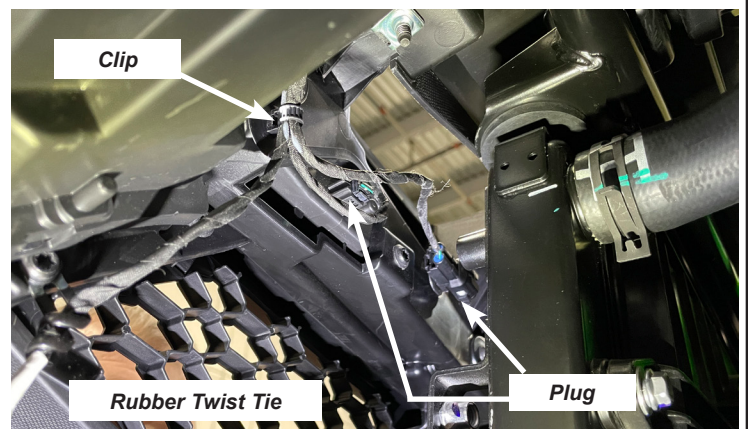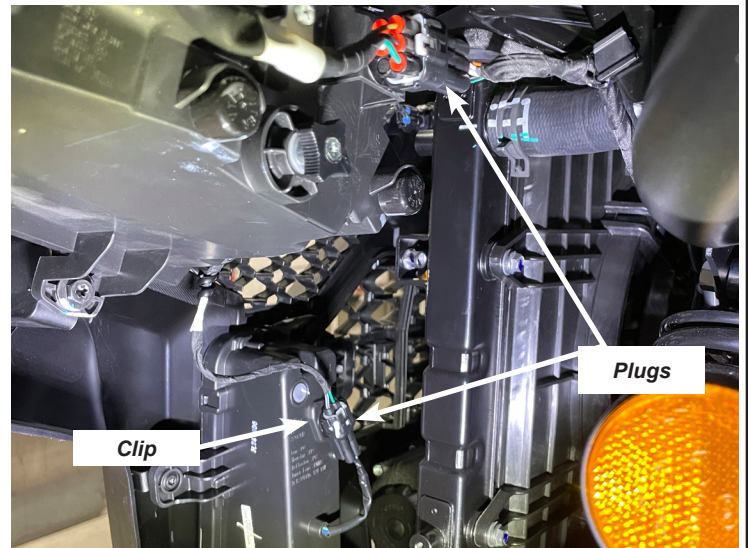

INSTALLATION INSTRUCTIONS

10. Remove the six torx head screws from the top of the front fascia.



11. Remove the two torx head screws from the lower part of the front fascia.




12. Slowly pull front fascia forward, ensuring all the wiring harnesses have been fully disconnected, and fully remove the front fascia from the vehicle and carefully set aside.

If vehicle is equipped with OE winch,


13. Remove winch strap, hook and bumper stop.
14. Remove OE fairlead. **NOTE: OE fairlead only needs to be removed if it is not being replaced by a short drum Warn fairlead.**
15. Remove cable leads from motor terminals.
16. Remove the four (4) mounting bolts from under the winch, and then fully remove the winch from the vehicle.



17. Locate your Warn winch, and the winch mount plate (A1) and two of the M8 flat head screws (B1) supplied in this kit.
18. Place the two flat head screws into the rear holes of the mounting plate.

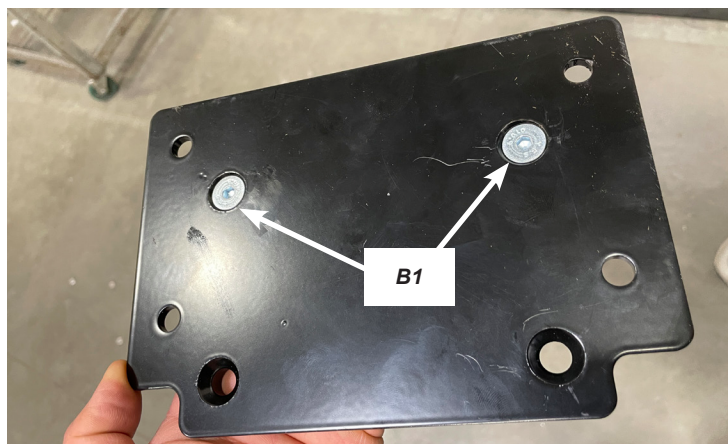

19. Position your Warn winch on top of the winch plate, lining up with the winch bolt holes. Secure the winch to the winch plate using the hardware (provided in your winch kit). **NOTE: Be sure the two flat head screws you installed above, stay seated.**

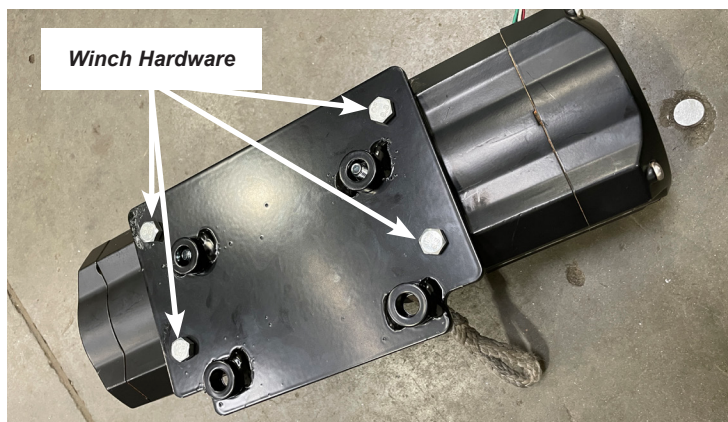

20. Place the winch/winch mount assembly onto the vehicle.
21. Put your winch into freespool, and pull out enough rope that the rear flat head screw is accessible and can be held with a hex key.
22. Insert the last two flat head screws (B1) into the front mounting plate holes.
23. Using a hex key and socket wrench, fully fasten all four screws and with the four nuts (B2).



INSTALLATION INSTRUCTIONS

24. Fully install your winch and wiring following the instructions supplied in your winch kit.
25. If the OE fairlead was removed, install a short drum Warn fairlead (sold separately). **NOTE: The standard-length fairlead in your winch kit will not mount to the OE fairlead mounting holes.**



26. Re-install the front fascia to the vehicle in the reverse order from how it was removed.
27. Install your Warn hook and hook strap to your rope.
28. Engage the winch. While holding the hook strap, slowly pulse the winch rope in to snug the hook to the fairlead.
29. This completes your Warn winch mount installation.

MAINTENANCE / CARE

1. Inspect all parts on the winch, winch mount and related hardware prior to each use. Replace all hardware that appears rusted or deformed.
2. Inspect all nuts and bolts on the winch, winch mount and related hardware prior to each use. Tighten all nuts that appear to be loose. Stripped, fractured, or bent bolts or nuts need to be replaced.
3. Check all cables prior to use. Replace cables that look worn or frayed.
4. Check all moving or rotating parts. Remove debris that may inhibit the part from moving freely.

CARELESS INSTALLATION AND OPERATION CAN RESULT IN SERIOUS INJURY OR EQUIPMENT DAMAGE. READ AND UNDERSTAND ALL SAFETY PRECAUTIONS AND OPERATING INSTRUCTIONS BEFORE INSTALLING AND OPERATING THIS PRODUCT.

