

## 21-23 FORD BRONCO TERRA SERIES REAR BUMPER ATTFB01B102-BX



### CAUTION BEFORE INSTALLING

**Before installation** - Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.  
Customer Service: (626) 369-2121

**ATTICA4X4 is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.**

Proper installation of this kit requires knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle.

- **Always wear eye protection when operating power tools.** •

*Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information:*

- Name of purchase location
- Date above Bar Code
- Bar Code on side of box
- Date inside box cover

# INSTALLATION MANUAL

## TOOLS REQUIRED

- 4MM HEX TOOL
- 10MM HEX SOCKET
- 18MM HEX SOCKET



## HARDWARE KIT

 **X 6**  
N09 | HEX FLANGE NUT


 **X 4**  
W25 | SPRING WASHER

 **X 4**  
W27 | WASHER

 **X 4**  
B37 | BOLT

 **X 6**  
B46 | HEX HEAD BOLT

 **X 2**  
REINFORCEMENT PLATE


 **X 2**  
L BRACKET

  
**X 1**  
SPARE PARTS HARDWARE KIT

# INSTALLATION MANUAL

Begin by unpacking all items and inspecting them for damage or missing items. Any concerns, please contact the company you purchased the rear bumper from.

After inspection, remove your factory rear bumper.

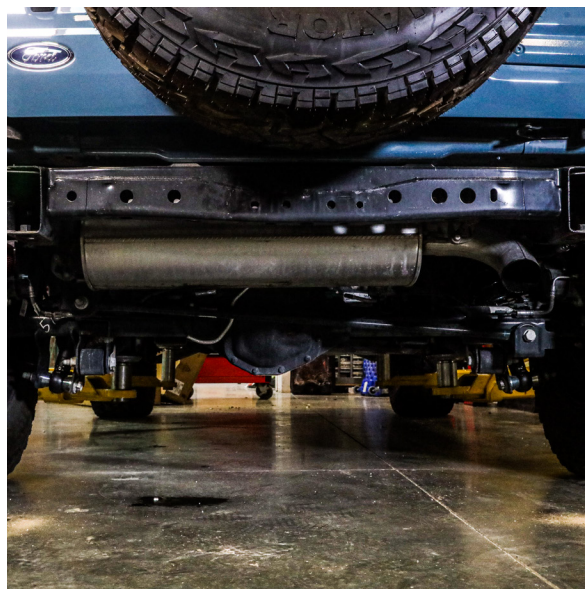

# INSTALLATION MANUAL



Remove your backup parking sensor from your factory rear bumper and locate the mounting point on the Attica Terra Series Rear Bumper.



Attach the backup parking sensor to the rear bumper using a **B46** hex head bolt. Secure it in place with an **N09** nut and a **W25** washer, using a **4mm** hex tool and a **10mm** socket.

# INSTALLATION MANUAL

The rear bumper lights connect to your tail light harness. Install the Attica inline tail light harness adapter.

Next, connect the bumper light extension harness to the inline tail light harness adapter.


The opposite end will then connect to your rear bumper lights.

\*The extra connectors are used for our Attica Terra Series Side Steps and Roof Rack lighting.




# INSTALLATION MANUAL

Next, position the L bracket on both sides of the rear frame opening as shown on the right.

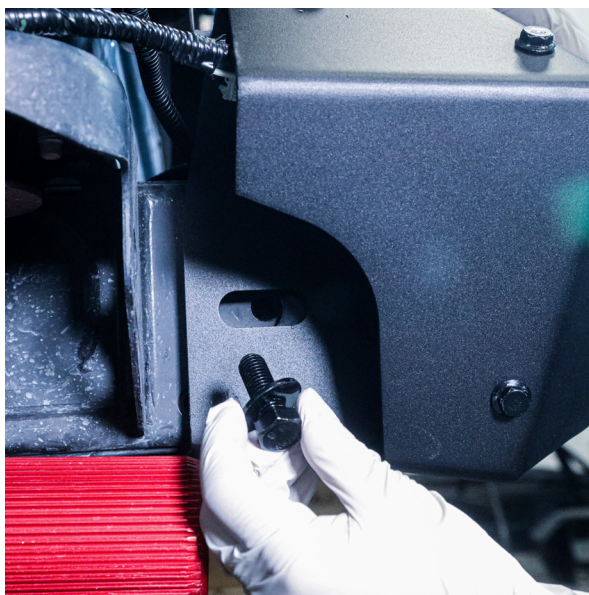

Use a **B37** bolt and a **W27** washer. Thread it into the nut on the L bracket using an **18mm socket**.

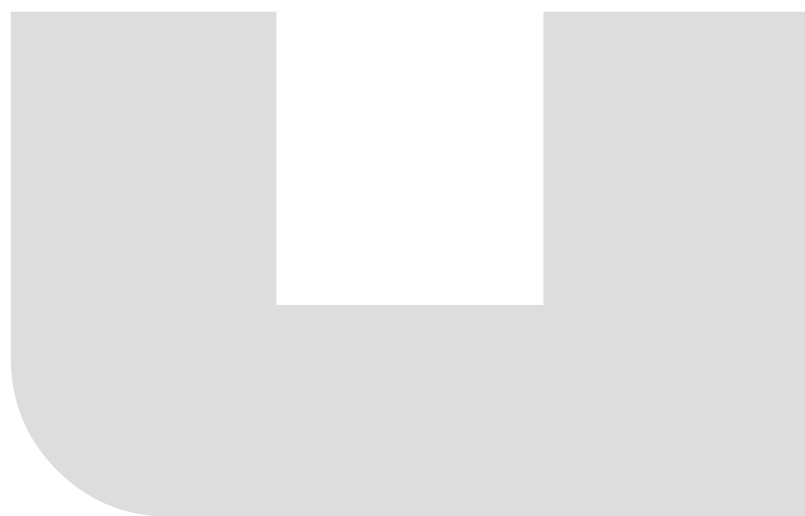

# INSTALLATION MANUAL



Use the factory bolts and Attica reinforcement plate, tighten four bottom bolts using an **18mm socket**.



# INSTALLATION MANUAL

The last step is to reconnect the parking sensor harness.

Once finished, your Attica Terra Series Rear Bumper will be completely installed and ready to take to the outdoors!







IF YOU HAVE ANY QUESTIONS, PLEASE EMAIL US AT [TECH@ATTICA4X4.COM](mailto:TECH@ATTICA4X4.COM) OR CALL US AT  
626-369-2121