

21-23 FORD BRONCO FRONTIER SERIES SIDE STEPS ATTFB01C103-BX



CAUTION BEFORE INSTALLING

Before installation - Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: (626) 369-2121

ATTICA4X4 is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit requires knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle.

- **Always wear eye protection when operating power tools.** •

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information:

- Name of purchase location
- Date above Bar Code
- Bar Code on side of box
- Date inside box cover

INSTALLATION **MANUAL**

TOOLS REQUIRED

- 13MM HEX SOCKET
- 13MM WRENCH



HARDWARE KIT




X 6
W23 | WASHER



X 30
W16 | SPRING WASHER



X 6
W22 | SPRING WASHER



X 6
B32 | BOLT



X 30
B20 | BOLT



X 60
W19 | WASHER



X 30
N22 | HEX FLANGE NUT



X 1
SPARE PARTS HARDWARE KIT

INSTALLATION MANUAL

Begin by unpacking all items and inspecting them for damage or missing items. Any concerns, please contact the company you purchased the side steps from.

After inspection, remove your factory side steps.



Start by installing the two hardware support brackets together using **B20** bolts, **W16** and **W19** washers, and **N22** nuts.

Once in place, leave the hardware loose allowing the bracket movement, they will be tightened at the later step.

INSTALLATION MANUAL



Attach the hardware support brackets to the side step using **B20** bolts, **W16** and **W19** washers, and **N22** nuts. Leave the hardware loose allowing movement in the bracket.



The side steps mount to your vehicle using **B32** bolts, **W22** and **W23** washers. For the smaller mounting points, use **B20** bolts, **W16** and **W19** washers, and **N22** nuts.

Once in place, secure them by tightening with a **13mm wrench** and a **13mm socket tool**.

INSTALLATION MANUAL

The side step lights connect to your tail light harness. Install the Attica inline tail light harness adapter.

Connect the side step light harness to the inline tail light harness adapter.


*The extra connectors are used for our Attica Terra Series Rear Bumper and Roof Rack lighting.



After completing the previous step, connect it to the other adapter(s). Once finished, feed the wire harness underneath so that it can be connected to the lights on the side step.

INSTALLATION MANUAL

Refer to the image shown on the right to see how to connect your Attica Frontier Series Side Step with the adapter(s).

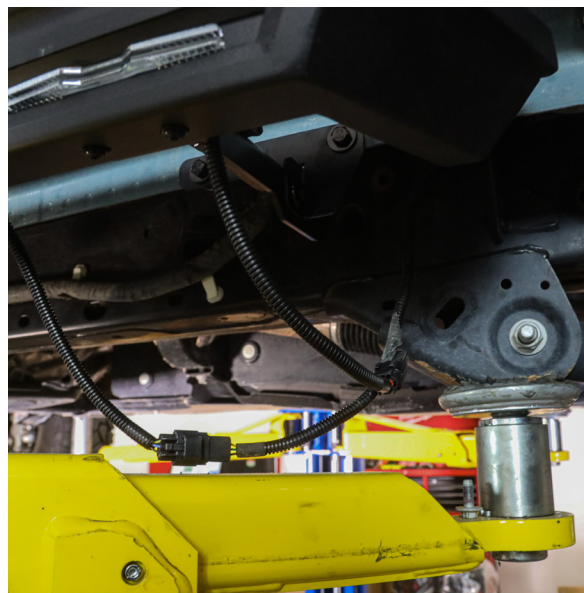

Secure the wiring harness using zip ties.



INSTALLATION MANUAL

Once finished, your Attica Frontier Series Side Steps will be completely installed and ready to take to the outdoors!





IF YOU HAVE ANY QUESTIONS, PLEASE EMAIL US AT TECH@ATTICA4X4.COM OR CALL US AT
626-369-2121