

18-22 JEEP WRANGLER JL APEX SERIES FRONT BUMPER ATTJL01A108-BX



CAUTION BEFORE INSTALLING

Before installation - Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: (626) 369-2121

ATTICA4X4 is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit requires knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle.

- **Always wear eye protection when operating power tools.** •

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information:

- Name of purchase location
- Date above Bar Code
- Bar Code on side of box
- Date inside box cover



INSTALLATION **MANUAL**

TOOLS REQUIRED

- 13MM SOCKET
- 16MM SOCKET
- 16MM WRENCH
- 5MM HEX TOOL



HARDWARE KIT

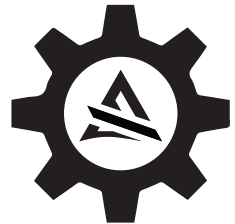

X 1
SPARE PARTS HARDWARE KIT

INSTALLATION MANUAL

CAUTION | For this installation we suggest having an extra pair of hands to help out.

Begin by unpacking all items and inspecting them for damage or missing items. Any concerns, please contact the company you purchased the bumper from.

After inspection, remove your factory bumper & winch.



Start by installing the winch guard into place on the main center section of the bumper.

INSTALLATION MANUAL



Align the mounting points of your bull bar with the top of your front bumper as shown above. It mounts to the front bumper using your **B19 bolts**, **W19 washers** and **N14 nuts** with **5mm hex tool** & **13mm socket tool**.



Next step is to slide your winch plate into the place behind the bumper.

INSTALLATION MANUAL

Proceed by mounting your Attica Wrangler Apex Series Front Bumper on your vehicle.



Once mounted, secure and fasten your D-Ring hooks on each side of the front bumper. Fasten with **B57 bolts**, **W23 washers**, **W22 lockwashers** & **N15 nuts** from behind the bumper with **16mm socket tool** & **16mm wrench**.



INSTALLATION MANUAL

Refer to image shown on right to see how your hardware is used to install the D-Ring hooks to your bumper.



Mount your winch into your front bumper as shown to the left and you are ready to go!





IF YOU HAVE ANY QUESTIONS, PLEASE EMAIL US AT TECH@ATTICA4X4.COM OR CALL US AT 626-369-2121