

18-23 JEEP WRANGLER JL TERRA SERIES REAR FENDER FLARES ATTJL01H107-BX-R



CAUTION BEFORE INSTALLING

Before installation - Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: (626) 369-2121

ATTICA4X4 is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit requires knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle.

- **Always wear eye protection when operating power tools.** •

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information:

- Name of purchase location
- Date above Bar Code
- Bar Code on side of box
- Date inside box cover

INSTALLATION **MANUAL**

TOOLS REQUIRED

- 4MM HEX TOOL



HARDWARE KIT

 **X 6**
N09 | HEX FLANGE NUT

 **X 4**
N14 | HEX FLANGE NUT


 **X 4**
W19 | WASHER

 **X 20**
W11 | WASHER

 **X 20**
B07 | HEX HEAD BOLT

 **X 4**
B15 | HEX HEAD BOLT

 **X 14**
R01 | RIVET NUT

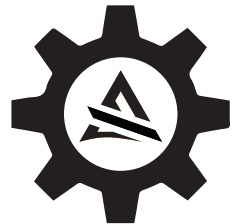

X 1
SPARE PARTS HARDWARE KIT

INSTALLATION MANUAL

Begin by unpacking all items and inspecting them for damage or missing items. Any concerns, please contact the company you purchased the fender flares from.

After inspection, remove your factory fender flares.



INSTALLATION MANUAL



Drilling is necessary to fit the R01 rivet nuts into the holes.

*You will need a tool specifically designed to install the rivet nuts. If you don't have one, an alternative method is to use a bolt, two washers, and a nut, as shown in the top left.



The mounting points require **B07** bolts and **W11** washers. Secure them using a **4mm hex tool**.

INSTALLATION MANUAL

Once finished, your Attica Terra Series Rear Fender Flares will be completely installed and ready to take to the outdoors!





IF YOU HAVE ANY QUESTIONS, PLEASE EMAIL US AT TECH@ATTICA4X4.COM OR CALL US AT
626-369-2121