

19-23 JEEP GLADIATOR JT FRONTIER SERIES REAR BUMPER ATTJT01B103-BX



CAUTION BEFORE INSTALLING

Before installation - Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: (626) 369-2121

ATTICA4X4 is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit requires knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle.

- **Always wear eye protection when operating power tools.** •

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information:

- Name of purchase location
- Date above Bar Code
- Bar Code on side of box
- Date inside box cover

INSTALLATION **MANUAL**

TOOLS REQUIRED

- 10MM SOCKET
- 16MM SOCKET
- 4MM HEX TOOL



HARDWARE KIT



X 8
W11 | WASHER



X 4
W23 | WASHER



X 4
W27 | WASHER



X 4
N15 | HEX FLANGE NUT



X 4
N09 | HEX FLANGE NUT




X 4
W25 | WASHER



X 4
W22 | WASHER



X 4
B07 | HEX HEAD BOLT



X 4
B37 | HEX HEAD BOLT



X 4
B35 | HEX HEAD BOLT



X 1

SPARE PARTS HARDWARE KIT

INSTALLATION MANUAL

Begin by unpacking all items and inspecting them for damage or missing items. Any concerns, please contact the company you purchased the bumper from.

After inspection, remove your factory bumper & winch.



INSTALLATION MANUAL

First step is to position your license plate lights in the brackets as shown on the right.



To secure them to the bumper, utilize **B07** bolts, **W11** washers, and **N09** nuts, employing a **10mm socket tool** and a **4mm hex tool**.


INSTALLATION MANUAL



Follow the provided pictures to properly install the parking sensor housing. Ensure that the position and location of the sensors match those of your factory bumper, as mixing them up may result in error codes.




INSTALLATION MANUAL

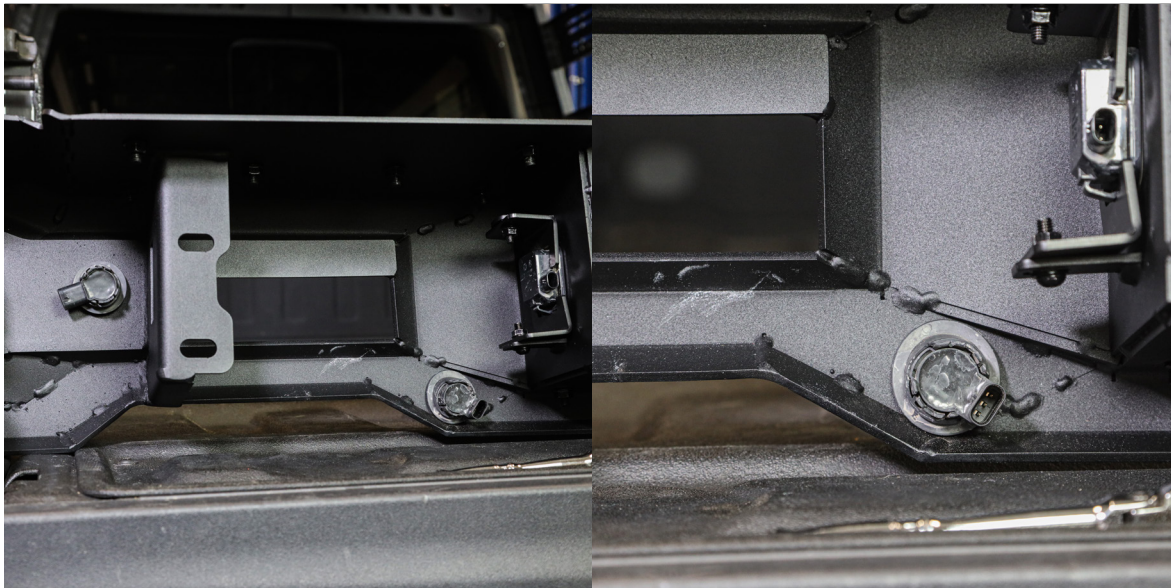

The bumper mounts to the frame using **B35** bolts, **W22** and **W23** washers, and **N15** nuts with a **16mm** socket tool.

Once finished your Attica Frontier Series Rear Bumper will be completely installed and ready to take to the outdoors!

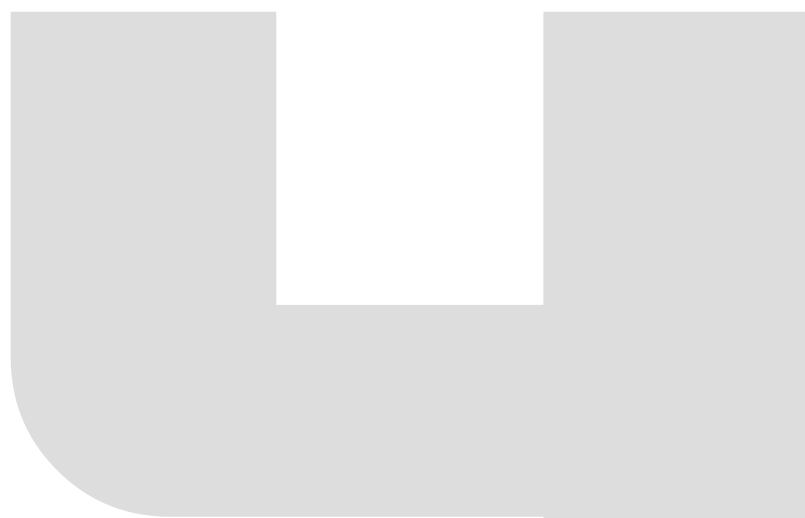



IF YOU HAVE ANY QUESTIONS, PLEASE EMAIL US AT TECH@ATTICA4X4.COM OR CALL US AT
626-369-2121