PART# 4140
UNIVERSAL DRIVESHAFT LOOP

INSTALLATION INSTRUCTIONS

This Kit Contains:

2 - Right Angle Steel Pieces (2" Wide X 1/4" Thick)	**2 -** Half-loop steel Pieces (2" Wide X 1/4" Thick)
4 - 3/8"-16 X 1-1/4" Bolts	**4 -** 3/8"-16 X 1-1/2" Bolts
8 - 3/8" Flat Washers	**8 -** 3/8" Lock Nuts

1. Determine correct height of driveshaft loop before drilling holes in floor. Ends of steel plates may be bent if needed, due to limited clearances. The Trans-Dapt Performance loop is adjustable to allow for varied driveshaft heights. Once this is known, position plates, drill holes and secure with the 3/8-16 X 1-1/2" bolts.

2. Complete installation by the placement of the half loops. Secure in desired location with the 3/8-16 X 1 3/4" bolts provided.

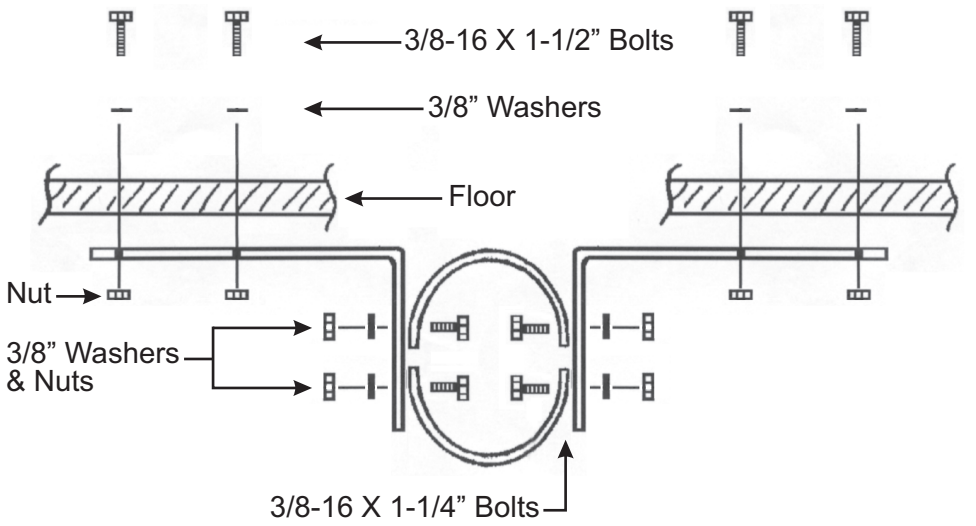

12438 Putnam Street ● Whittier, CA 90602 ● tel (562) 921-0404 ● fax (562) 921-7515
website: www.hedman.com ● email: techsupport@hedman.com