PART # 9517
CHROME PLATED LINEAR WIRE LOOMS

1. Assemble tabs & snap in wire separators as shown.

2. Install using valve cover hold-down.

3. Snap spark plug wires into separators & route.
Note: Separators will fit 7mm, 8mm & 9mm wires.

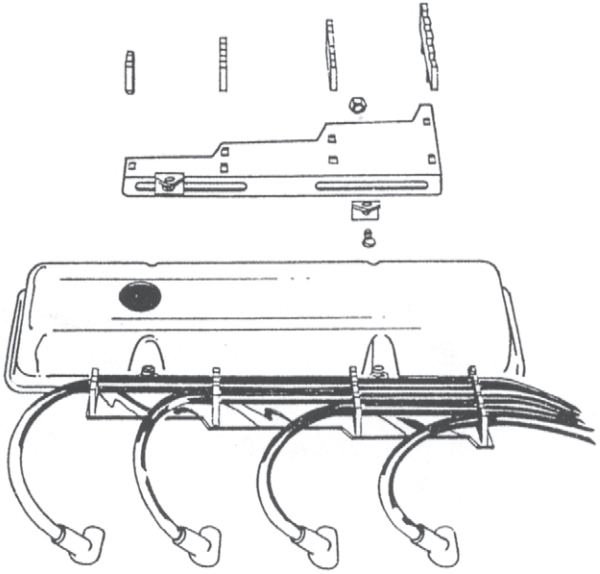

12438 Putnam Street • Whittier, CA 90602
tel (562) 921-0404 • fax (562) 921-7515
website: www.hedman.com
email: techsupport@hedman.com