


PARTS LIST:

1	Driver/Left Side Bar	8	8-1.25mm x 30mm Hex Bolts
1	Passenger/Right Side Bar	16	8 x 24mm OD x 2mm Flat Washers
2	Driver/Left Side Mounting Brackets	16	8mm Lock Washers
2	Passenger/Right Side Mounting Brackets	8	8-1.25mm Hex Nuts

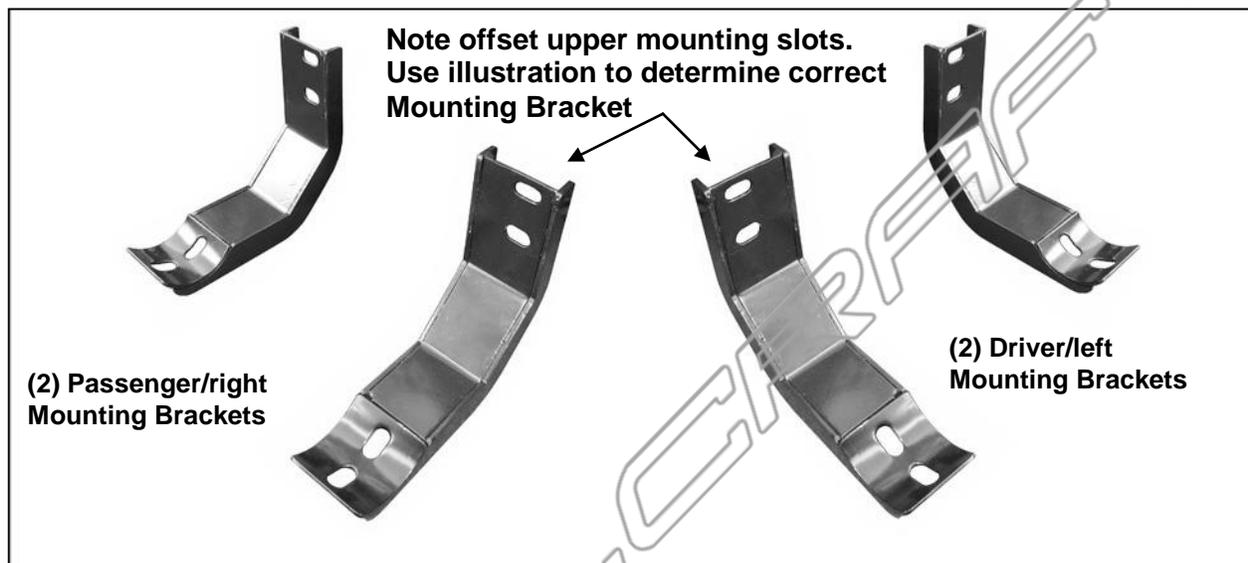

PROCEDURE:

1. **REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY.**
2. Remove the existing factory running boards or side steps, if equipped, by removing the hex nuts holding the mounting brackets to the inside of the body.
3. Select the driver side front Mounting Bracket, **(Figure 1A)**. Attach the Bracket to the front mounting location, **(Figure 1B)**, with the included (2) 8mm Flat Washers, (2) 8mm Lock Washers and (2) 8mm Hex Nuts. Do not tighten at this time. **NOTE:** Slots in the top of the mounting brackets are off set. Use the illustration above to select the proper Mounting Bracket.
4. Repeat **Step 3** for the driver side rear Mounting Bracket installation, **(Figure 2)**.
5. Carefully place the driver Sidebar onto the Mounting Brackets. Attach the Sidebar to the Brackets with the included (4) 8 x 30mm Hex Bolts, (4) 8mm Lock Washers and (4) 8mm Flat Washers. Do not tighten at this time.
6. Level and adjust the Sidebars as desired and tighten all hardware.
7. Repeat **Steps 2 - 6** for passenger Sidebar installation.
8. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.


For stainless steel: Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Sidebar.

For gloss black finishes: Mild soap may be used to clean the Sidebar.

Driver Side Installation Pictured



(Fig 1A) Driver/left Mounting Bracket

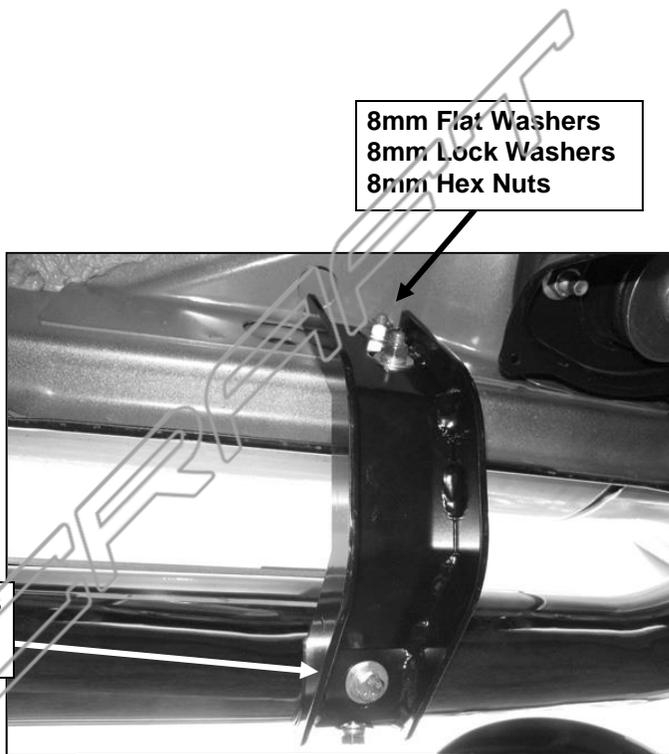

8mm Flat Washers
8mm Lock Washers
8mm Hex Nuts

8mm x 30mm Hex Bolts
8mm Lock Washers
8mm Flat Washers

8mm Flat Washers
8mm Lock Washers
8mm Hex Nuts

(Fig 1B Driver/left front Bracket pictured)

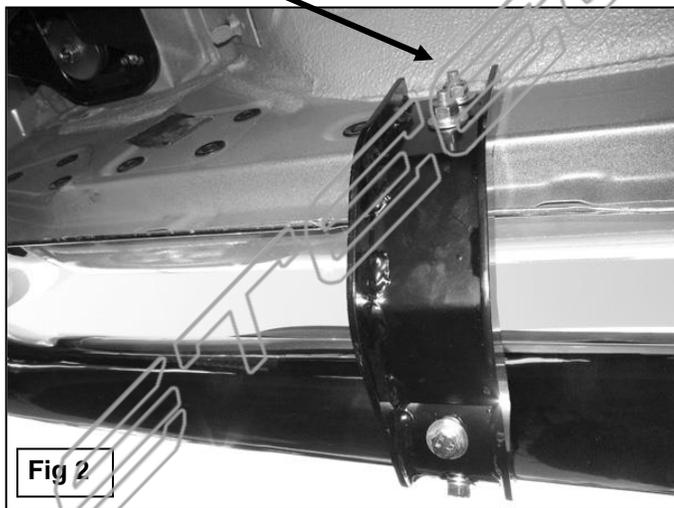


Fig 2

8mm x 30mm Hex Bolts
8mm Lock Washers
8mm Flat Washers



Installation Complete